DVR User Manual

For H.264 4/8/16-channel digital video recorder

All rights reserved

CAUTION

- Please read this user manual carefully to ensure that you can use the device correctly and safely.
- There may be several technically incorrect places or printing errors in this manual. The updates will be added into the new version of this manual. The contents of this manual are subject to change without notice.
- This device should be operated only from the type of power source indicated on the marking label. The voltage of the power must be verified before using. If the device doesn't work for a long time, pull out the plug from the socket.
- Do not install this device near any heat sources such as radiators, heat registers, stoves or other device that produce heat.
- Do not install this device near water. Clean only with a dry cloth.
- Place the device in a well-ventilated area.
- Do not power off the DVR at normal recording condition! The correct operation to shut off DVR is to stop recording firstly, and then to select "shut-down" button at the right of the menu bar to exit, and finally to cut off the power.
- This machine is indoor using equipment. Do not expose the machine in rain or moist environment. In case any solid or liquid get into the machine's case, please cut off the power supply immediately, and ask for qualified technicians to check the machine before restart
- Do not try to repair the device by yourself without technical aid or approval.
- When this product is in use, the relevant contents of Microsoft, Apple and Google will be involved in. The pictures and screenshots in this manual are only used to explain the usage of our product. The ownerships of trademarks, logos and other intellectual properties related to Microsoft, Apple and Google shall belong to the above-mentioned companies.
- This manual is suitable for 4/8/16-channel digital video recorders. All examples and pictures used in the manual are from 16-channel DVR.

Table of Contents

1 Introduction 1
1.1 DVR Introduction 1
1.2 Main Features 1
2 Hardware Installation 3
2.1 Install Hard Drive &DVD Writer 3
2.1.1 Install Hard Drive 3
2.1.2 Install DVD Writer 3
2.2 Front Panel Descriptions 4
2.3 Rear Panel Instructions 4
2.4 Remote Controller 6
2.5 Control with Mouse 8
2.5.1 Connect Mouse 8
2.5.2 Use Mouse 8
3 Basic Function Instruction 9
3.1 Power On/Off 9
3.1.1 Power On 9
3.1.2 Power Off 9
3.2 Login 9
3.3 Live Preview 10
3.4 Live Playback 10
4 Main Menu Setup Guide 12
4.1 Basic Configuration 12
4.1.1 System 13
4.1.2 Time & Date 14
4.1.3 DST 14
4.2 Live Configuration 15
4.2.1 Live 15
4.2.2 Main Monitor 16
4.2.3 Spot 16
4.2.4 Mask 17
4.3 Record Configuration 17
4.3.1 Enable 18
4.3.2 Record Bitrate 18
4.3.3 Time 19
4.3.4 Stamp 20
4.3.5 Recycle Record 20
4.3.6 Snap 21
4.4 Schedule Configuration 21
4.4.1 Schedule 21
4.4.2 Motion Schedule 22
4.4.3 Sensor Schedule 22
4.5 Alarm Configuration 22

4.5.1 Sensor Alarm 22
4.5.2 Motion Alarm 24
4.5.3 Video Loss 25
4.5.4 Other Alarm 26
4.5.5 Alarm Out 26
4.6 Network Configuration 27
4.6.1 Network 27
4.6.2 Sub Stream 28
4.6.3 Email 29
4.6.4 Server 29
4.6.5 Other Settings 30
4.7 User Management Configuration 32
4.8 P.T.Z Configuration 34
4.9 Advanced 38
4.9.1 Reset 38
4.9.2 Import/Export 38
4.9.3 Block/Allow List 38
5 Search, Playback & Backup 39
5.1 Time Search 39
5.2 Event Search 40
5.3 File Management 40
5.4 Search by Image 41
5.5 Backup 41
6 Manage DVR 43
6.1 Check System Information 43
6.1.1 System Information 43
6.1.2 Event Information 43
6.1.3 Log Information 43
6.1.4 Network Information 43
6.1.5 Online Information 43
6.1.6 Record Information 43
6.2 Manual Alarm 43
6.3 Disk Management 43
6.4 Upgrade 44
6.5 Logoff 44
7 Remote Surveillance 45
7.1 IE Remote Surveillance 45
7.1.1 On LAN 45
7.1.2 On WAN 45
7.2 Remote Surveillance through Apple PC 46
7.2.1 On LAN 47
7.2.2 On WAN 48
7.3 The Remote Live Preview 49
7.4 Remote Playback & Backup 52
7.4.1 Remote Playback 52

7.4.2 Remote Backup 55
7.5 Remote System Configuration 55
7.6 Tools 56
7.7 Remote Management 56
8 Mobile Surveillance 57
8.1 By Phones with Windows Mobile OS 57
8.2 By Phones with iPhone OS 58
8.3 By Phones with Android OS 64
8.4 By Phones with Blackberry OS 68
Appendix A FAQ 73
Appendix B Calculate Recording Capacity 77
Appendix C Compatible Devices 78
Appendix D 4-CH Specifications 79
Appendix E 8-CH Specifications 80
Appendix F 16-CH Specifications 81

1 Introduction

1.1 DVR Introduction

This model DVR (Digital Video Recorder) is designed specially for CCTV system. It adopts high performance video processing chips and embedded Linux system. Meanwhile, it utilizes many most advanced technologies, such as standard H.264 with low bit rate, Dual stream, SATA interface, VGA output mouse supported, IE browser supported with full remote control, mobile view(by phones), etc., which ensure its powerful functions and high stability. Due to these distinctive characteristics, it is widely used in banks, telecommunication, transportation, factories, warehouse, and irrigation and so on.

1.2 Main Features

COMPRESSION FORMAT

- Standard H.264 compression with low bit rate and better image quality

LIVE SURVEILLANCE

- Supports HDMI/ VGA/BNC output
- Supports channel security by hiding live display
- Display the local record state and basic information
- Supports USB to make full control

RECORD MEDIA

- Supports two SATA HDDs to record for a longer time without any limitation

BACKUP

- Supports USB 2.0 devices to backup
- Supports built-in SATA DVD writer to backup
- Supports saving recorded files with AVI standard format to a remote computer through internet

RECORD & PLAYBACK

- Record modes: Manual, Schedule, Motion detection and Sensor alarm recording
- Supports recycle after HDD full
- Resolution, frame rate and picture quality are adjustable
- 4/8/16-ch WD1 real time recording
- 4 audio channels available
- Three record search modes: time search, event search and image search
- 4/8/16 screen playback simultaneously
- Supports deleting and locking the recorded files one by one
- Supports remote playback in Network Client through LAN or internet

ALARM

- 1 channel alarm output and 4/8/16 channel alarm input available
- Supports schedule for motion detection and sensor alarm
- Supports pre-recording and post recording

- Supports linked channels recording once motion or alarm triggered on certain channel
- Supports linked PTZ preset ， auto cruise and track of the corresponding channel

PTZ CONTROL

- Supports various PTZ protocols
- Supports 128 PTZ presets and 8 auto cruise tracks
- Supports remote PTZ control through internet

SECURITY

- Customize user right: log search, system setup, two way audio, file management, disk management, remote login, live view, manual record, playback, PTZ control and remote live view
- Supports 1 administrator and 63 users.
- Supports event log recording and checking, events unlimited

NETWORK

- Supports TCP/IP, DHCP, PPPoE, DDNS protocol
- Supports IE browser to do remote view
- Supports setup client connection amount
- Supports dual stream. Network stream is adjustable independently to fit the network bandwidth and environment.
- Supports picture snap and color adjustment in remote live
- Supports remote time and event search, and channel playback with picture snap
- Supports remote PTZ control with preset and auto cruise
- Supports remote full menu setup, changing all the DVR parameters remotely
- Supports mobile surveillance by smart phones , WinCE, iPhone or Gphone, 3G network available
- Supports CMS/NVMS to manage multi devices on internet

2 Hardware Installation

2.1 Install Hard Drive &DVD Writer

2.1.1 Install Hard Drive

Check the unit and the accessories after getting the DVR. Please don't power up the unit till the physical installation is complete.

Notice: *1. This series support two SATA hard drives. Please use the hard drive the manufacturers recommend specially for security and safe field.*
2. Please calculate HDD capacity according to the recording setting. Please refer to "Appendix B Calculate Recording Capacity".

Step 1: Unscrew and open the top cover.
Step 2: Connect the power and data cables. Place the HDD onto the bottom case as Fig 2-1.
Step 3: Screw the HDD as Fig 2-2.

Fig 2-1 Connect HDD

Fig 2-2 Screw HDD

Note*: For convenience installation, please connect the power and data cables first and then wind the screws to fix the HDD.*

2.1.2 Install DVD Writer

Step 1: Unscrew and open the top cover.
Step 2: Connect the power and data cable. Place the DVD writer onto the bottom case as Fig 2-3.
Step 3: Screw the HDD as Fig 2-4.

Fig 2-3 Connect the DVD Writer

Fig 2-4 Screw the Writer

***Note**: The writer which is for backup only must be the compatible device we recommend. Please refer to "Appendix C Compatible Devices".*

2.2 Front Panel Descriptions

***Notice:** The front panel descriptions are only for reference; please make the object as the standard.*

Item	Type	Name	Description
1	Work state indicator	Power	The power indicator turns blue when DVR is powered up.
		HDD	The light turns blue when HDD is writing and reading.
		Net	The light turns blue when it is able to access the network.
		Backup	The light turns blue when backing up files and data.
		Play	The light turns blue when playing video.
		REC	The light turns blue when recording.
2	Function button	MENU/+	1. Enter menu in live 2. Increase the value in setup
		BACKUP/-	1. Decrease the value in setup 2. Enter backup mode in live
		RECORD/FOCUS	1. Record manually 2. FOCUS function enables at PTZ mode.
		REW/SPEED	1. Rewind key 2. SPEED function enables at PTZ mode
		SEARCH/ZOOM	1. Enter search mode 2.ZOOM function enables at PTZ mode.
		PLAY /IRIS	1. Enter play interface 2. IRIS function enables at PTZ mode
		FF/ P.T.Z.	1. Fast forward 2. Enter PTZ mode in live.
		STOP/ESC	1. Quit play mode 2. Exit the current interface or status.
3	Digital button	1-9	Input number 1-9 or choose camera.
		0/10+	Input number0, 10 and the above number together with other digital keys .
4	Input button	Direction button	Change direction to select items.
		Multi-screen	Change screen display mode like1/4/9/16 channel.
		Enter button	Confirm selection.
5	IR receiver	IR	For remote controller
6	USB	USB port	To connect external USB devices like USB flash, USB HDD for backup or update firmware; or connect to USB mouse.

2.3 Rear Panel Instructions

The rear Panel interface for 4-ch is shown as Fig 2-5:

Fig 2-5 Rear Panel for 4-ch

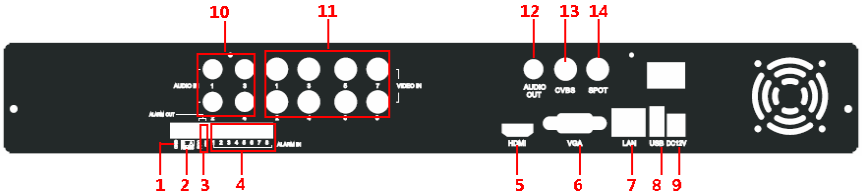

Fig 2-6 Rear Panel for 8-ch

Item	Name	Description
1	GND	Grounding
2	RS485	Connect to speed dome or keyboard
3	ALARM OUT	1-ch relay output. Connect to external alarm
4	ALARM IN	Connect to external sensor
5	HDMI port	Connect to high-definition display device
6	VGA port	VGA output, connect to monitor
7	LAN	Network port
8	USB port	Connect USB mouse or connect external USB devices
9	DC12V	Power supply
10	Audio in	4 CH Audio input
11	Video in	Video inputs
12	Audio out	Audio output, connect to the sound box
13	CVBS	CVBS video output
14	Spot	Connect to monitor as an AUX output channel by channel. Video would be displayed without OSD.

The rear Panel interface for 16-ch is shown as Fig 2-7:

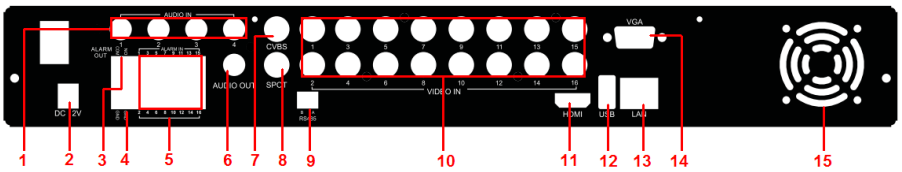

Fig 2-7 Rear Panel for 16-ch

Item	Name	Description
1	Audio in	4-ch audio inputs
2	DC 12V	Power input
3	Alarm out	1-ch relay output. Connect to external alarm.
4	GND	Grounding
5	Alarm in	Connect to external sensor1
6	Audio out	Audio output, connect to the sound box
7	CVBS port	CVBS video signal output
8	Spot	Connect to monitor as an AUX output channel by channel. Video would be displayed without OSD.
9	RS485	Connect to keyboard or speed dome
10	Video in	Video inputs
11	HDMI port	Connect to high-definition display device
12	USB port	To connect external USB devices like USB flash, USB HDD for backup or update firmware; or connect to USB mouse
13	LAN	Network port
14	VGA port	VGA output, connect to monitor
15	Fan	For cooling the device

2.4 Remote Controller

It uses two AAA size batteries.

Step 1: Open the battery cover of the remote controller.

Step 2: Place batteries. Please take care the polarity (+ and -).

Step 3: Replace the battery cover.

Key points to check in case the remote doesn't work.

1. Check batteries polarity.

2. Check the remaining charge in the batteries.

3. Check IR controller sensor for any masking.

4. Check the ID of the remote with respect to the DVR.

If it still doesn't work, please change a new remote controller to try, or contact your dealers. The interface of remote controller is shown in Fig 2-8 Remote Controller..

***Note:** Please press P.T.Z button to enter into PTZ setting mode and then choose a channel and press P.T.Z button again to hide the P.T.Z control panel prior to enabling preset, cruise, track, wiper or light button.*

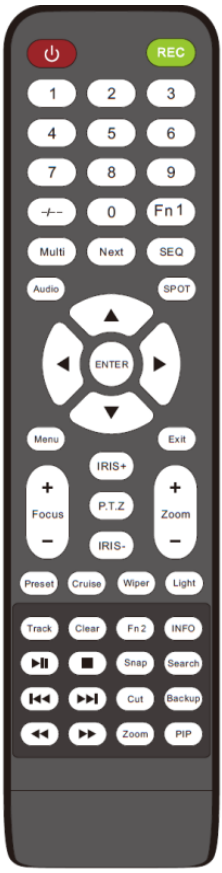

Fig 2-8 Remote Controller

Button	Function
Power Button	Switch off—to stop DVR. Use it before turning off the power
Record Button	To record manually
-/-- /0-9 Digital Button	Input number or choose camera
Fn1 Button	Unavailable temporarily
Multi Button	To choose multi screen display mode
Next Button	To switch the live image
SEQ	To enter into auto dwell mode
Audio	To enable audio output in live mode
Switch	To switch the output between BNC and VGA
Direction button	To move cursor in setup or pan/title PTZ
Enter Button	To confirm the choice or setup
Menu Button	To enter into menu
Exit Button	To exit the current interface
Focus/IRIS/Zoom/PTZ	To control PTZ camera. Move camera/zoom/IRIS/Focus
Preset Button	To enter into preset setting in PTZ mode
Cruise Button	To enter into cruise setting in PTZ mode
Track Button	To enter into track setting in PTZ mode
Wiper Button	To enable wiper function in PTZ mode
Light Button	To enable light function in PTZ mode
Clear Button	To return to the previous interface
Fn2 Button	Unavailable temporarily
Info Button	Get information about DVR like firmware version, HDD information
	To control playback. Play/Pause/Stop/Previous Section/Next Section/Rewind/Fast Forward
Snap Button	To take snapshots manually
Search Button	To enter into search mode
Cut Button	To set the start/end time for backup in playback mode
Backup Button	To enter into backup mode
Zoom Button	To zoom in the images
PIP Button	To enter into picture in picture setting mode

Operation processes with remote controller to control multi-DVR

The device ID of the DVR is 0. It's not necessary to reset the device ID when a remote is not be used to control a single DVR. However when controlling multiple DVRs with multiple remote controllers, you would need to configure the device ID. Please refer to below steps:

Step 1: Activate remote controller to control DVR: Turn the IR sensor of the remote controller towards the IR receiver on the front panel, press the number key 8 twice, then input device ID of the DVR to be controlled (Range from: 0-65535; the default device ID is 0) and then press ENTER button to confirm.

Step 2: Check the device ID of DVR from System Setup → Basic → Device ID. You can also set multiple DVRs with the same device ID. However, this can cause interference if the DVRs are kept close to each other.

2.5 Control with Mouse

2.5.1 Connect Mouse

It supports USB mouse through the ports on the rear panel.
If mouse is not detected or doesn't work, check below steps:
1. Make sure the mouse is plugged in the USB mouse port..
2. Try with a good know mouse.

2.5.2 Use Mouse

During live:
Double-click on any camera window to see the full screen mode. Double-click again to return to the previous screen mode.
Right click to reveal the control menu on the screen. Right click again to hide the menu.

In Configuration:
Click to enter a particular option. Right click to cancel the option or to return to the previous menu.
In order to input a value in a particular screen, move cursor to the input box and click. An input window will appear as Fig 2-9. It supports digits, alphabets and symbols input. Click Shift button to input Capital letters and symbols; click Shift button again to return.
It supports mouse drag. Take setting up motion detection area for example: Click customized, hold down the left button and drag to set motion detection area.

Fig 2-9 Digital Numbers and Letters Input Window

In Playback:
Click to choose the options. Right click to return to live mode.

In Backup:
Click to choose the options. Right click to return to previous picture.

In PTZ Control:
Click left button to choose the buttons to control the PTZ. Click right button to return to live.

***Note**: Mouse is the default tool for all operations unless an exception, as indicated.*

3 Basic Function Instruction

3.1 Power On/Off

Before you power on the unit, please make sure all the connection is good.

3.1.1 Power On

Step 1: Connect with the source power.
Step 2: The device will boot and the power LED would turn blue.
Step 3: A WIZZARD window will pop up and show some information about time zone, time setup, network configuration, record configuration and disk management. User can setup here and refer to the concrete setup steps from the corresponding chapters. If users don't want to setup Wizard, please click Exit button to exit.

> ***Note:*** *This DVR can only display options on either VGA monitor or BNC monitor at a given point of time, if there is live image display without menu options then please check if there is display on other device/monitor, or long press ESC key to wait for login dialog box to appear. Long press ESC key can switch the output between BNC and VGA.*

3.1.2 Power Off

User can power off the device by using remote controller, keyboard and mouse.

By remote controller:
Step 1: Press Power button. This will take you to a Shut down window. The unit will power off after a while by clicking OK button.
Step 2: Disconnect the power

By keyboard and mouse:
Step 1: Enter into Menu and then select "Shut Down" icon to pop up the Shut down window.
Step 2: Click OK. Then the unit will power off after a while.
Step 3: Disconnect the power.

3.2 Login

User can login or log off the DVR system. Once logged off the user cannot do any other operation except changing the multi-screen display.

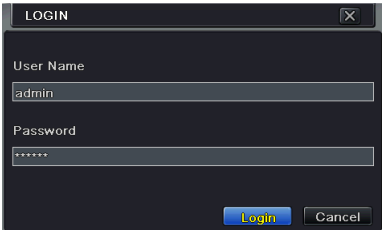

Fig 3-1 Login

Notice: *The default user name and password is "admin" and 123456".*
For complete operational steps for changing password, adding or deleting users, please refer to section 4.7 User Management Configuration.

3.3 Live Preview

Fig 3-2 Live Preview Interface

Symbol	Meaning
Green	Manual record
Yellow	Motion detection record
Red	Sensor Alarm record
Blue	Schedule record

3.4 Live Playback

Click Play button to playback the record. Refer to Fig 3-3. User can do complete operation by clicking the buttons on screen.

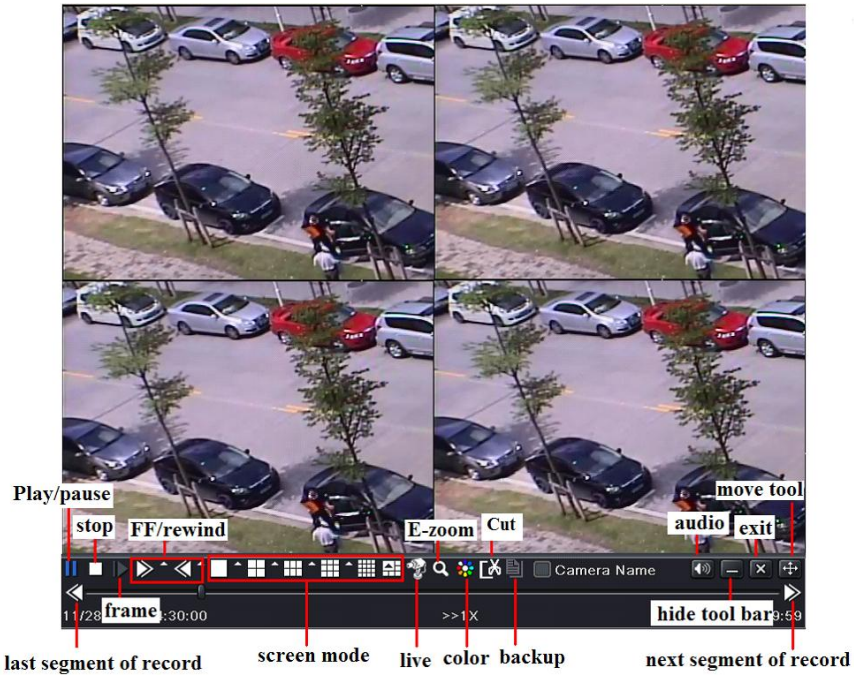

Fig 3-3 Live Playback

4 Main Menu Setup Guide

Click right mouse or press ESC button on the front panel and then the control bar will display at the bottom of the screen. Refer to Fig 4-1:



Fig 4-1 Main Menu Toolbar

Click the icon beside the screen display mode to display a channel select dialog. 6/8/13 channels can realize single channel big screen. Images can drag to any place to display in the live interface. Click icon to set up picture-in-picture.

Dwell: Dwell means to display live images from different cameras in a sequence. The images may be displayed as a single channel or in a grid fashion from different cameras. Dwell mode is enabled only when the chosen display mode is not able to display all the available cameras.

Color: If this button is enabled, you can adjust the color of live pictures.

E-Zoom: Single channel large screen electronic amplification.

Volume: Enable sound.

PTZ: Click the PTZ button to control rotation position, speed and auto scan of the PTZ.

Snap: Click this button to snap the live pictures. These pictures will automatically be saved in the SATA disk.

Record: Click this button to start/stop recording.

Playback: Click this button to playback the record files.

Click Menu button to pop up a window as Fig 4-2; user can also press MENU button on the front panel or operate with remote controller to display the main menu. Clicking Setup icon will pop-up the configuration menu:

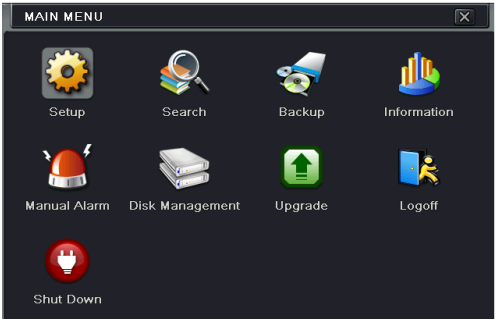

Fig 4-2 Setup

4.1 Basic Configuration

Basic configuration includes three sub menus: system, date & time and DST.

4.1.1 System

Step 1: Enter into Menu→Setup→Basic →System interface. Refer to Fig 4-3:

Fig 4-3 Basic Configuration-System

Step 2: In this interface you can setup the device name, device ID, video format, max network users, VGA resolution, language and so on. The definitions for every parameters display as below:

Device Name: The name of the device. It may display on the client end or CMS that help user to recognize the device remotely.

Device ID: This ID is used to map the DVR with IR remote controller and speed dome cameras.

Video Format: Two modes: PAL and NTSC. User can select the video format according to that of camera.

Password Check: If this option is enabled, the user would need to input the user name and the password for performing corresponding operations.

Show System Time: If selected, the current time will be displayed during live monitoring.

Max Online Users: To set the max number of concurrent user logins in the DVR.

Video Output: The resolution of live display interface, range from: VGA800*600, VGA1280*1024 and CVBS.

> ***Note：*** *Switching between VGA and CVBS will change the menu output mode. Please connect to relevant monitor.*

Language: Setup the menu language.

> ***Note****: After changing the language and video output, the device needs to login again.*

Logout After (Minutes): A user can setup the screen interval time (30s, 60s, 180s, 300s). If

there is no any operation within the setting period, the device will auto logout and return to login interface.

Show Wizard: If selected, the GUI would launch the startup wizard on every boot, allowing the user to do basic setup.

No Image When Logout: If selected, there will be no image showing when logging out.

4.1.2 Time & Date

Step 1: Enter into Menu→Setup→Basic →Date & Time interface. Refer to Fig 4-4:

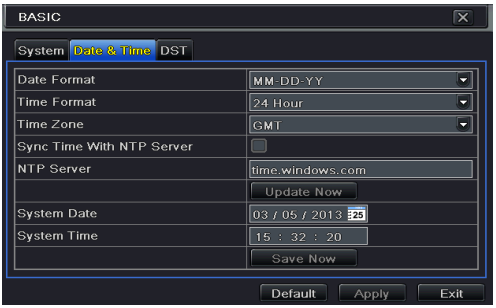

Fig 4-4 Basic Configuration-Date & Time

Step 2: Set the date format, time format, time zone in this interface; checkmark "sync time with NTP server" to refresh NTP server date. You can also adjust system date manually.

Step 3: Click "Apply" button to save the setting.

4.1.3 DST

Step 1: Enter into Menu→Setup→Basic →DST interface. Refer to Fig 4-5:

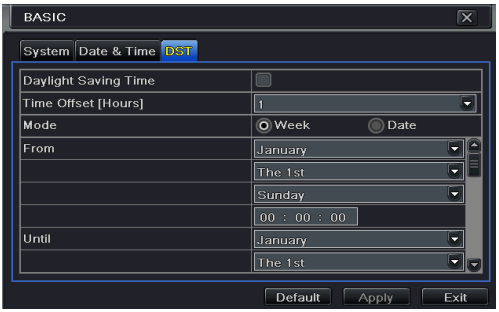

Fig 4-5 Basic Configuration-DST

Step 2: In this interface, enable daylight saving time, time offset, mode, start & end month/week/date, etc.

Step 3: Click "Apply" button to save the setting.

4.2 Live Configuration

Live configuration includes four submenus: live, main monitor, spot and mask.

4.2.1 Live

In this interface, you can setup camera name and adjust colors.

To setup camera name:

Step 1: Enter into Menu→Setup→Live→Live. Refer to Fig 4-6:

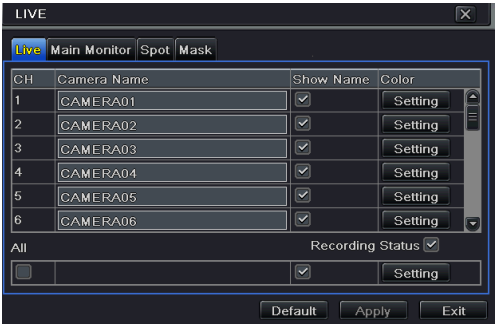

Fig 4-6 Live Configuration→Live

Step 2: A software keyboard will pop up by clicking camera name area. Click the letters and (or) digital numbers on the keyboard to input the name you want to display in live image.

Step 3: Checkmark the camera name in the show name area.

All channels will show the camera name by checking "All" checkbox.

Step 4: Click "Apply" to save the setting.

To setup color:

Step 1: Click "Setting" button for a particular camera/channel to see a window as Fig 4-7:

Fig 4-7 Live-Color Adjustment

Step 2: In this interface, you can adjust brightness, hue, saturation and contrast in live. Click "OK" button to save the setting.

4.2.2 Main Monitor

The main monitor settings allow you to set camera sequence in live display mode.
Operate the following steps to set main monitor:
Step 1: Enter into Menu→Setup→Live →Main Monitor interface. Refer to Fig 4-8:

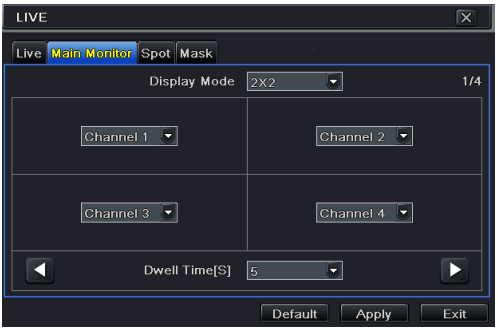

Fig 4-8 Live Configuration-Main Monitor

Step 2: Select display mode and channel.
Step 3: Select dwell time. Click button to setup the previous channel groups of dwell picture. Click button to set the latter channel groups of dwell picture.
Step 4: Click "Apply" to save the setting.

4.2.3 Spot

Step 1: Enter into Menu→Setup→Live →Spot interface. Refer to Fig 4-9:
Step 2: Select channel. Click button to setup the previous channel of dwell picture. Click button to set the latter channel of dwell picture.
Step 3: Click "Apply" button to save the setting.

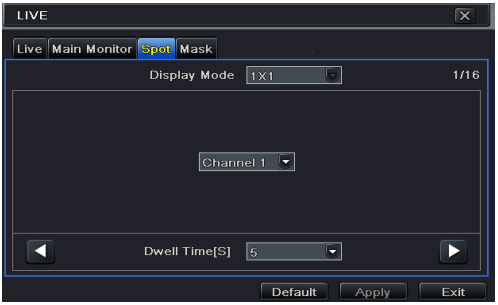

Fig 4-9 Live Configuration-Spot

4.2.4 Mask

If there is something you don't want to display in the live image. You can set mask. For a given channel a maximum of three areas can be masked.

To setup mask area:

Step 1: Enter into Menu→Setup→Live →Mask interface.

Fig 4-10 Live Configuration-Mask

Step 2: Click Setting button to go into live image.
Step 3: Press and drag the left mouse button to set mask area as shown below.
Step 4: Right click to exit the mask setting interface.
Step 5: Click Apply button to save the setting.

To delete mask area

Step 1: Click Setting button in the mask interface.
Step 2: Select a certain masked area and double click to delete that masked area.
Step 3: Then click Apply button to save the setting.

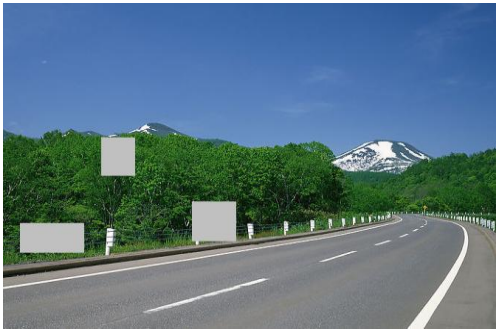

Setup Mask Area

4.3 Record Configuration

Record configuration includes six sub menus: enable, record bit rate, time, recycle record,

stamp and snap.

Before Configuration, please make sure your DVR has been installed with HDD and has completed its initialization.

4.3.1 Enable

Step 1: Enter into Menu→Setup→Record→Enable interface. Refer to Fig 4-11:

Fig 4-11 Record Configuration-Enable

Parameter	Meaning
Record	To enable/disable recording for the channel
Audio	To enable/disable audio recording for the channel

Step 2: Checkmark record and audio.

Step 3: Select All to setup the same settings for all channels.

4.3.2 Record Bitrate

Step 1: Enter into Menu→Setup→Record →Record Bitrate. Refer to Fig 4-12:

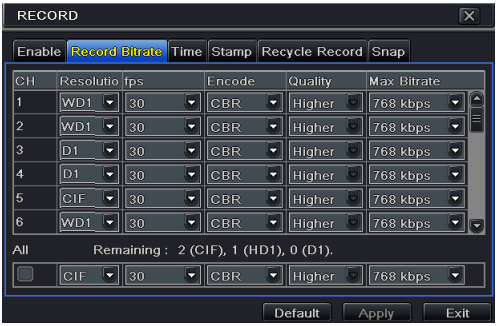

Fig 4-12 Record Configuration-Record Bitrate

Parameter	Meaning
Rate	Range from: 1-30（NTSC）1-25(PAL)
Resolution	Supports CIF, HD1, D1 & WD1
Quality	The higher the value is, the clearer the recorded image is. Six options: lowest, lower, low, medium, higher and highest.
Encode	VBR and CBR
Max bit stream	Range from: 768~2560bps

Step 2: Setup rate, resolution, quality, encode and max bit stream
Step 3: Select "All" to set the same settings for all channels.
Step 4: Click "Apply" button to save the setting.

4.3.3 Time

Step 1: Enter into Menu→Setup→Record → Time interface to set recording time. Refer to Fig 4-13:

Fig 4-13 Record Configuration-Time

Step 2: Set Pre-alarm record time and post-alarm record time. Select "All" to set the same settings for all channels.

Pre-alarm Record Time: Set the time in seconds to pre-record before the actual recording begins.
Post-alarm Record Time: Set the time in seconds to post-record after the actual recording has finished, five options: 10s, 15s, 20s, 30s, 60s, 120s, 180s and 300s.
Expire Time: Set the expiration time for recorded video. If the set date is overdue, the recorded files will be deleted automatically.

Step 3: Click "Apply" to save the setting.

4.3.4 Stamp

This provides an option to enable or disable the Camera Name and the Time stamp on the video. The user can also choose a position for the stamp on the screen**.**

To setup stamp as follows:

Step 1: Enter into Menu→ Setup→Record→Stamp interface. Refer to Fig 4-14:

Fig 4-14 Record Configuration-Stamp

Step 2: Checkmark camera name and time stamp. Click Setting button to setup the position of the stamp. You can drag the camera name and time stamp at random positions. Refer to below Figures:

Before drag

After drag

Step 3: Select "All" to setup all channels with the same parameters.

4.3.5 Recycle Record

This option is used to recycle the HDD space once it is full. If enabled, the system will automatically delete the old records and recycle the space if it is completely utilized. The setting steps are as follows:

Step 1: Enter into Menu→Setup→Record →Recycle Record interface;

Step 2: Checkmark recycle record to activate auto recycling. If the option is disabled or not selected, the DVR would stop recording once HDD is full.

Step 3: Click "Apply" button to save the setting.

4.3.6 Snap

In this interface, user can set up Resolution, quality, snap interval, snap number.

4.4 Schedule Configuration

Schedule configuration includes three sub menus: schedule, motion and alarm.

4.4.1 Schedule

This tab allows defining schedule for normal recording for seven days of a week, 24 hours of a day. Every row denotes an hourly timeline for a day. Click the grid to do relevant setup. A highlighted area denotes selected timeline. Operate the following steps to set schedule:

Step 1: Enter into Menu→Setup→Schedule interface. Refer to Fig 4-15:

Step 2: Select channel and click " " button to add a certain day schedule. Click " " button to delete the selected schedule.

If you want to apply the schedule setting of a certain channel to other or all channels, you need to select channel and click "Copy" button.

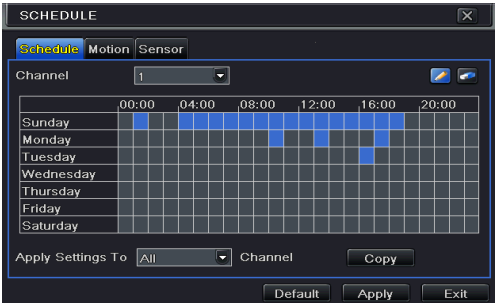

Fig 4-15 Schedule Configuration-Schedule

You can also set week schedule by double-clicking in the grinding area. This will take you to see a dialog box as Fig 4-16.

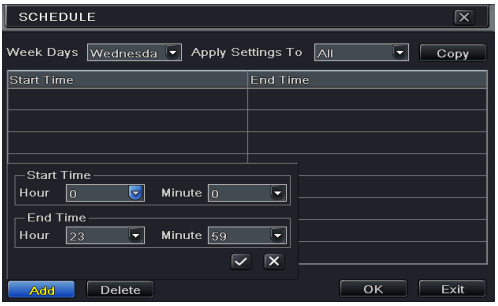

Fig 4-16 Schedule-Week Schedule

Step 1: Select a day and click "Add" button to schedule start time and end time. Then click to save.

Step 2: Select other days and add schedule or copy settings from one schedule to the others under the Apply Settings To item.

4.4.2 Motion Schedule

This tab allows to set schedule for motion based recording. The setting steps are as follows:

Step 1: Enter into Menu→Setup→Schedule →Motion tab.

Step 2: The setup steps for schedule for motion based recording are similar to normal schedule setup. You can refer to 4.4.1 Schedule for details.

> ***Note:*** *The default schedule of motion based recording is 24 x 7. If you want to activate motion based recording, you must enable motion alarm and setup schedule for motion alarm (see Chapter 4.5.2 Motion Alarm for more details).*

4.4.3 Sensor Schedule

This tab allows to set schedule for sensor based recording. The setting steps are as follows:

Step 1: Enter into Menu→Setup→Schedule→Sensor interface.

Step 2: The setup steps for schedule for sensor based recording are similar to normal schedule setup (see Chapter 4.4.1 Schedule for details).

> ***Note:*** *The default schedule of sensor based recording is 24 x 7. If you want to activate sensor based recording, you must enable sensor alarm and setup schedule for sensor alarm (see Chapter 4.5.1 Sensor Alarm for more details).*

4.5 Alarm Configuration

Alarm configuration includes five sub menus: sensor, motion, video loss, other alarm and alarm out.

4.5.1 Sensor Alarm

Sensor includes three sub menus: basic, alarm handling and schedule.

Operate the following steps to configure sensor alarm:

Step 1: Enter into Menu→Setup→Alarm →Sensor→Basic interface. Refer to Fig 4-17:

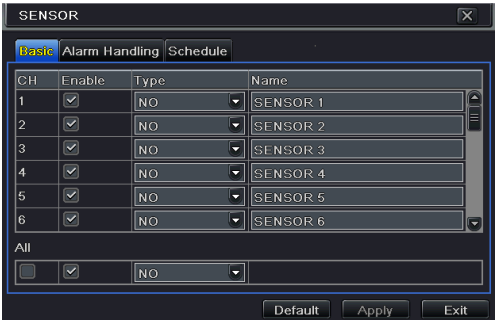

Fig 4-17 Alarm Configuration-Sensor-Basic

Step 2: Enable channels by checking the checkboxes beside the desired channels.
Step 3: Set the alarm type according to triggered alarm type. Two option: NO and NC.
Step 4: Click "Apply" button to save the setting.
Step 5: Enter into Alarm Handling tab. Refer to Fig 4-18. Select hold time and then click "Setting" button to pop up a dialog box as shown in Fig 4-19.
Step 6: Enter into alarm tab to select the options to handle alarm.

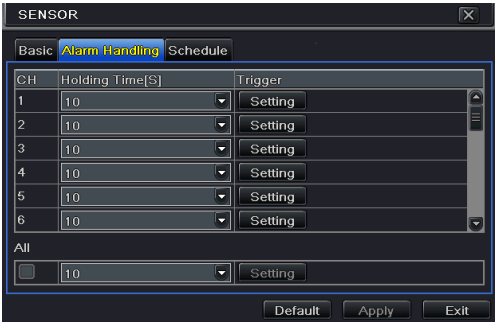

Fig 4-18 Alarm Configuration-Sensor-Alarm Handling

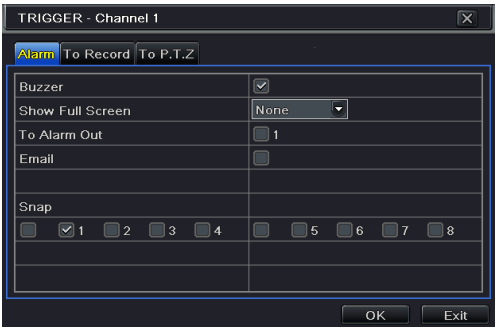

Fig 4-19 Alarm Handling-Trigger

Buzzer: If selected, the local buzzer would be activated on an alarm.
Show Full Screen: If selected, there will pop up the chosen channel on the monitor on an alarm trigger.
Email: If selected, the DVR will send an email alert to the preconfigured email address in case of a sensor based alarm from the particular input.
Snap: If selected, the system will snap images of the checked channels on an alarm and save them in the HDD automatically.

Step 7: Enter into To Record tab. Select recording channels. It would be recorded in case of an alarm. Click OK button to save the setting.
Step 8: Enter into To PTZ tab. Set preset, cruise and track options for a PTZ in case of a sensor based alarm. Single or multiple PTZ units could be programmed to perform this function on the same alarm.
Step 9: Enter into Schedule tab. The setting steps for schedule for sensor based alarm are similar to normal schedule setup. You can refer to 4.4.1 Schedule for details. This step is very important for sensor alarm. Even if you have enabled the sensor alarm for all channels and setup the trigger, you will not see the result of sensor alarm if no schedule is added.
If you have set schedule for sensor based recording in the same timeline, recordings can also be triggered.

4.5.2 Motion Alarm

Motion includes two sub menus: motion and schedule. The steps to set motion alarm are as follows:
Step 1: Enter into Menu→Setup→Alarm →Motion. Refer to Fig 4-20:

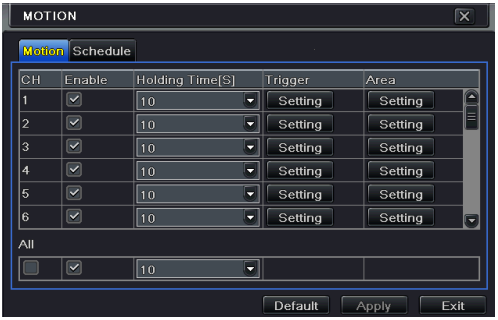

Fig 4-20 Alarm Configuration-Motion

Step 2: Enable motion alarm, set alarm hold time which refers to the time till which the system will wait for further detection of motion. e.g. If the holding time is set to 10 seconds, once the system detects a motion, it will go into alarm but would not detect any other motion alarm (specific to channel) until 10 seconds. If there is other motion detected during this period it is considered it as continuous movement, otherwise it will be considered as a single

motion.

Step 3: The setup steps of motion trigger are similar to "Alarm Handling" (See Chapter 4.5.1 Sensor →Alarm Handling setting for more details).

Step 4: After clicking Area button, a dialog box will pop-up as Fig 4-21:

Fig 4-21 Motion-Area

Step 5: In the Area interface, you can drag slide bar to set the sensitivity value (1-8). The higher the value is the more sensitive it is to motion. Since the sensitivity is influenced by color and time (day or night), you can adjust its value according to the practical conditions. Left click the grid and drag to delete area. Click icon to set the whole area as detection area. Click icon to clear the set detection area. Click icon to test the sensitivity as per the local conditions. Once motion is sensed, it displays a figure icon. Click icon, to save the setting. Click icon to exit the current interface.

> ***Note: Prior** to setting motion detection field it is recommended that you click icon to clear the existing field and set afresh.*

Step 6: Select "All" to set the same settings for all channels.

Step 7: Click "Apply" button to save the setting.

Step 8: Enter into Schedule tab. The setting steps for schedule for motion based alarm are similar to normal schedule setup (see Chapter 4.4.1 for more details).

4.5.3 Video Loss

This DVR can be set up to detect video loss. The setting steps are as follows:

Step 1: Enter into Menu→Setup→Alarm →Video Loss. Refer to Fig 4-22:

Step 2: The setup steps of video loss trigger are similar to "Alarm Handling" (See Chapter 4.5.1 Sensor →Alarm Handling setting for more details).

Fig 4-22 Alarm Configuration-Video Loss

4.5.4 Other Alarm

This tab gives a choice to configure alarm for Disk Full, IP Conflict, the Disconnect event, Disk Attenuation or Disk Lost.

Step 1: Enter into Menu → Setup →Other Alarm. Refer to Fig 4-23:

Step 2: Use the dropdown menu and select the event or the alarm.

Step 3: Check the required trigger options.

If the selected event is "Disk Full", then use the drop down box for "Disk Shortage Alarm" to choose a threshold value for remaining HDD space. If the threshold value is reached, the system will trigger the Disk Full Alarm.

Step 4: Click "Apply" to save the setting.

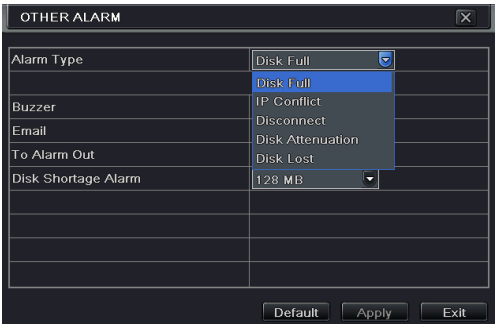

Fig4-23 Other Alarm

4.5.5 Alarm Out

Alarm out includes three sub menus: alarm out, schedule and buzzer.

To setup alarm out:

Step 1: Enter into Menu→Setup→Alarm Out. Refer to Fig 4-24:

Step 2: Input relay name and select hold time.

Step 3: Enter into Schedule tab. This will go into schedule setup interface. The setting steps for schedule for alarm out are similar to normal schedule setup (see Chapter 4.4.1 for details).

This step is very important for alarm out. Even if you have enabled alarm out in the motion based alarm or sensor based alarm, you will not see the result of alarm out if no schedule is added here.

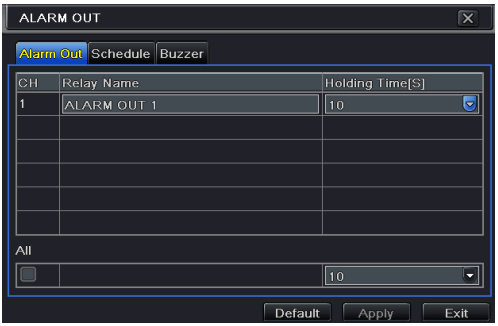

Fig 4-24 System Configuration-Alarm Out

To set up buzzer:

Step 1: Enter into Menu→Setup→Alarm Out →Buzzer.

Step 2: Checkmark Buzzer and set buzzer alarm hold time. This would trigger the buzzer when the system is on an alarm.

4.6 Network Configuration

Network configuration includes five submenus: network, sub stream, Email, server and other settings. Network settings must be configured if DVR is used for monitoring over network.

4.6.1 Network

To set up network:

Step 1: Enter into Menu→Setup→Network→Network tab. Refer to Fig 4-25:

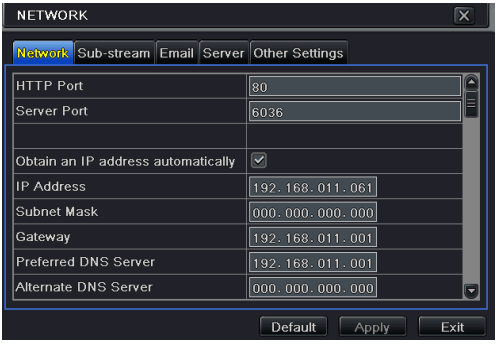

Fig 4-25 Network Configuration-Network

Step 2: Set HTTP port. The default HTTP port is 80. If the value is changed, you shall add the port number when typing IP address in IE address blank. e.g. If HTTP port is set to 82 and IP address is http://192.168.0.25, you should input the following IP address: http://192.168.0.25:82 into IE browser.
Step 3: Set server port. The default server port is 6036.
Step 4: Connect internet. There are three ways to connect internet.

- If you have a DHCP server running and would like your DVR to automatically obtain an IP address and other network settings, check the checkbox beside "Obtain an IP address automatically". Then the device will distribute IP address, subnet mask, and gateway IP and DNS server.

- If you want to configure your own settings, disable “Obtain an IP address automatically” item and input the IP address, subnet mask, gateway IP and DNS server.

- If you connect internet through PPPoE, disable “Obtain an IP address automatically” item and check PPPoE checkbox and then enter username and password. Once the setup is completed, your DVR will automatically dial up into your network.

Step 5: Test the effectiveness of the network by clicking “Test” button after you set up the network.
Step 6: If the network is well connected, please click “Apply” button to save the setting.

4.6.2 Sub Stream

To setup sub stream:
Step 1: Enter into Menu→Setup→Network →Sub Stream interface. Refer to Fig 4-26:
Step 2: Select fps, resolution, quality, encode and max bit rate
Step 3: Select “All” to set the same settings for all channels.

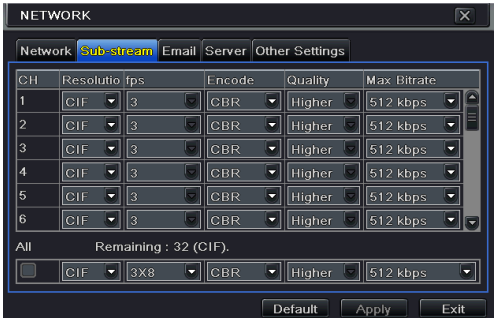

Fig 4-26 Network Configuration-Sub Stream

Parameter	Meaning
FPS	Range from: 1-25
Resolution	Support CIF
Quality	The quality of the clients' image. The higher the value is, the clearer the record image. Six options: lowest, lower, low, medium, higher and highest.
Encode	VBR and CBR
Max bit rate	Range from: 64 Kbps, 128 Kbps, 256 Kbps, 512 Kbps, 768 Kbps, 1Mbps, 2 Mbps

4.6.3 Email

To set up Email:

Step 1: Enter into Menu→Setup→ Network→Email interface. Refer to Fig 4-27:

Step 2: Set SMTP Server and port.

SMTP Server/Port: The name and port number of SMTP server. You can setup SSL check (such as Gmail) according to actual needs.

Step 3: Set sender's address and password.

Step 4: Set receiver's email address and click "Test" button to test the validity of the mailbox.

Attaching image: If selected, the system will attach images when sending emails.

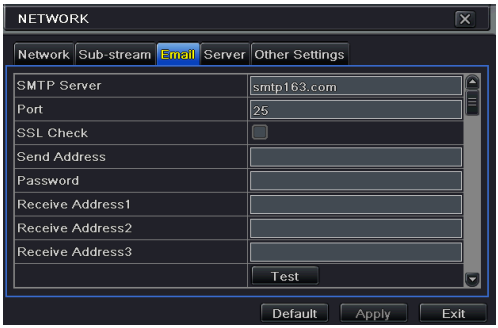

Fig 4-27 Network Configuration-Email

4.6.4 Server

This function is mainly used for connecting ECMS. The setting steps are as follows:

Step 1: In the server interface, select "Enable" as shown in the Fig 4-28.

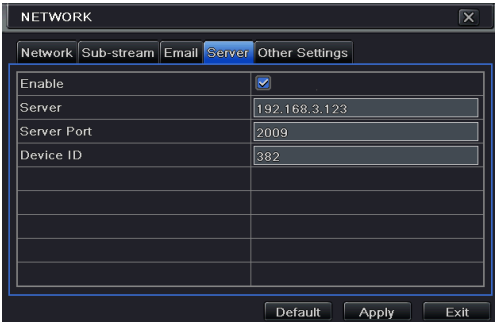

Fig 4-28 Network Configuration-Server

Step 2: Check the IP address and port of the transfer media server in the ECMS. The default server port for auto report is 2009. If it is modified, please enter into the transfer media interface to check.

Step 3: Enable the auto report in the ECMS when adding a new device. Then input the remaining information of the device in the ECMS. After that, the system will auto allot a Device ID. Please check it in the ECMS.

Step 4: Input the above-mentioned server IP, server port and device ID in the server interface. Then click "Apply" button to save the setting. Now, the ECMS system will automatically connect this device.

4.6.5 Other Settings

If your DVR is set to use PPPoE as its default network connection, you may setup DDNS to be used in connection. The setting steps are as follows:

Step 1: Enable DDNS server.

Step 2: Select DDNS server.

Step 3: Enter user name, password and host domain name of the registered website.

Step 4: Click "Test" button to test the effectiveness of the relevant information.

Step 5: Click "Apply" button to save the setting.

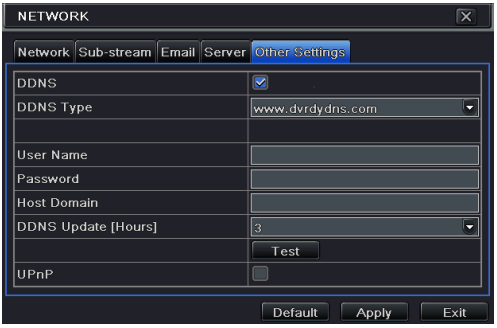

Fig 4-29 network Configuration-Other Settings

Note: *The domain name selected by user is a banding domain name of DVR. User should logon the website which provided by the server supplier to register a user name and password and then apply for a domain name online. After the successful application, user can access the device from the IE client by inputting that domain name.*

Enable UPnP: Select UPnP here and then enable UPnP function in your router. Therefore, there is no need for you to forward LAN IP address and port in the router in connection of internet. After that, you can check the WAN IP address in the router.

DDNS server	
DDNS server	Website provided by dynamic domain name supplier. The optional: www.meibu.com , www.dyndns.com, www.no-ip.com and mintdns type.
User name	User name for log in the website of domain name supplier
Password	Password for log in the website of domain name supplier
Host domain	The domain name user registered at the supplier's website.
Update interval	The interval time of upgrading DVR IP address

➢ **Domain name Registration** （Take www.dyndns.com for example）

Note: Users can self-define the hostname, username and password.

Input www.dyndns.com in the IE address bar, user can access the domain name registration interface. Click"Dynamic DNS service"→"Create Free Hostname" to register. For example: Hostname is "abc.dyndns.tv. The picture is shown as follows:

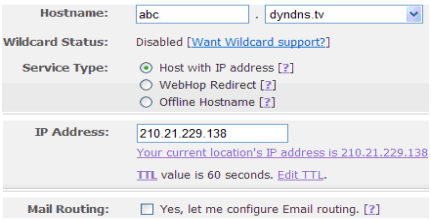

After user fill in the blank, click "Add to cart". Then Dynamic DNS Hosts dialog box will be displayed.

Next, create user account. For example, the username is "bcd", password is "123456".

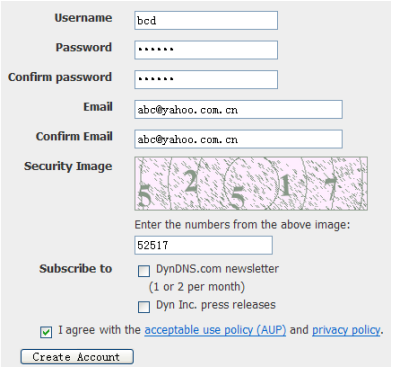

Click" Create Account" button to create user account.

➢ **DVR Setting**

（1） Domain name

According to the domain name registration of "DDNS", the domain name for DVR is "abc.dyndns.tv".

（2） Username and password

According to the above registration, username is "bcd".

According to the above registration, password is "123456".

Connect DVR to the Network Client.

Step 1: Enter into Main menu→Network→Other Settings, checkmark DDNS, select "Dyndns" at the DDNS Sever pull down list box and input user name and password.

Step 2: Enter into configuration interface of the router to map the server port and IP address (if the user enables UPnP function, he can skip this step). Click Save button to save the setting

Step 3: Login IE browser and input registered domain name "http://www.abc.dyndns.tv", connect to DVR client.

> ***Note**: If the value changed, user needs to add the port number when typing IP address in IE address blank .i.e. set HTTP port to 82, IP address: http://192.168.0.25, user needs to input that address: http://192.168.0.25:82 into IE browser.*

4.7 User Management Configuration

This tab allows you to add normal or advanced users. To add user and setup user authority:

Step 1: Enter into Menu→Setup→Users. Refer to Fig 4-30:

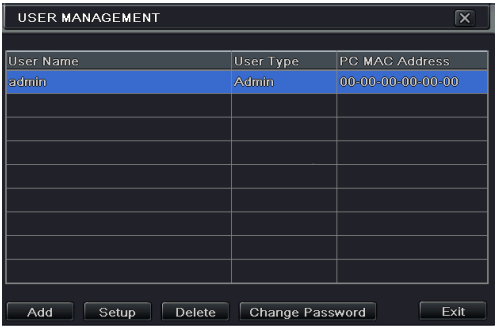

Fig 4-30 User Management Configuration

Step 2: Click Add button to display a dialog box as Fig 4-31:

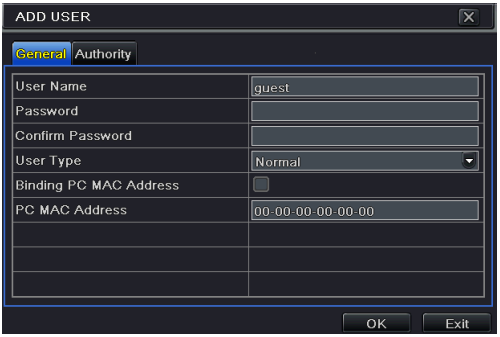

Fig 4-31 Add-General

Step 3: In General tab, input username, password and select user type. You can also check "Binding PC MAC Address" and input this address.

> ***Note:*** *When the default value of binding PC MAC Address is 0, the user is not bound with the specified computer. If the bind option is used, the user would be able to log into the DVR only through the specific computer (carrying the MAC address).*

Step 4: Click "OK" to save the setting.
Step 5: Select Authority tab and then assign the operation rights for particular user. Refer to Fig 4-32.
Step 6: Click OK to save the setting.

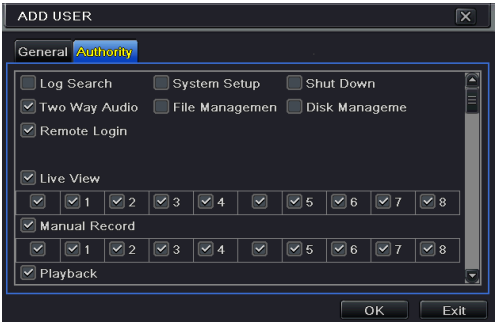

Fig 4-32 Add User-Authority

To delete user:
Step 1: Enter into Menu→Setup→Users interface.
Step 2: Select the added user you want to delete and then click "Delete" button.

To modify user:
Step 1: Enter into Menu→Setup→Users interface.
Step 2: Select the added user you want to modify and then click "Modify" button to do the relevant operation.

To change user password
Step 1: Enter into Menu→Setup→Users interface.
Step 2: Select the added user you want to change its password and then click "Change Password" button.

4.8 P.T.Z Configuration

P.T.Z configuration includes two submenus: serial port and advanced.

Serial port settings are as follows:
Step 1: Enter into Menu→Setup → P.T.Z →Serial Port interface. Refer to Fig 4-33:
Step 2: Select "Enable" and setup the value of address, baud rate and protocol according to the settings of the speed dome.
Step 3: Select "All" to set the same settings for all channels.

Fig 4-33 P.T.Z Configuration-Serial Port

Parameter	Meaning
Address	The address of the PTZ device
Baud rate	Baud rate of the PTZ device. Range form: 110, 300, 600, 1200, 2400, 4800, 9600, 19200, 34800, 57600, 115200, 230400, 460800, 921600.
Protocol	Communication protocol of the PTZ device. Range from: NULL, PELCOP, PELCOD, LILIN, MINKING, NEON, STAR, VIDO, DSCP, VISCA, SAMSUNG, RM110, HY, N-control.
Simulative Cruise	If enabled, no matter whether the PTZ device supports cruise or not, the presets will cruise.

Advanced settings include preset setting, cruise setting and track setting.
Enter into Menu→Setup→ P.T.Z →Advanced. Refer to Fig 4-34:

Fig 4-34 P.T.Z configuration-advanced

To set up preset:

Step 1: In the Advanced interface, click preset "Setting" button to see a dialog box as Fig 4-35:

Fig 4-35 Advanced-Preset Setting

Step 2: In the preset setting tab, enable preset, set the preset name and then click preset "Setting" button.

Fig 4-36 Preset Setting

Step 3: Control the dome by rotating up, up left, down, right down, left, left down, right and up right and adjust the rotate speed and the value of zoom, focus and iris of the dome.

Step 4: Select the serial number of the preset point. Click button to enable the PTZ wiper and click button to enable the PTZ light.

> ***Note:*** *PTZ must support wiper and light button and these two buttons are just available when selecting PELCOP or PELCOD.*

Step 5: Click Save button to save the setting. Click icon to hide the tool bar. Right click to view this bar again. Click icon to exit the current interface.

Step 6: Return to the Advanced-Preset Setting interface and click OK button to save the setting.

To set up cruise:

Step 1: In the Advanced interface, click cruise "Setting" button to see a window as shown in Fig 4-37:

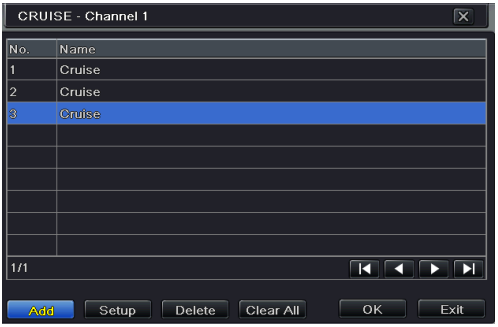

Fig 4-37 Cruise Setting

Step 2: Click Add button to add cruise line in the list box (8 cruise lines can be added at most).
Step 3: Select a cruise line and click Setup button to see a dialog box as Fig 4-38:

Fig 4-38 Modifying Cruise Line

Step 4: Click Add icon to set the speed and time of preset point. Select a preset point and then click Delete icon to delete that preset point. Click Modify icon to modify the setting of a preset point. User can click those icons to adjust the position of preset point. Click Preview button to preview the cruise line. Click OK button to save the setting.

To set up track:
Step1: In the Advanced interface, click track "Setting" button to see a dialog box as Fig 4-39:
Step 2: Control the dome by rotating up, up left, down, right down, left, left down, right and up right and adjust the rotate speed and the value of zoom, focus and iris of the dome.
Step 3: Click Start Record button to record the move track of PTZ. Click this button again to stop record.
Step 4: Click Start track button to play recorded track. Click this button again to stop playing.
Step 5: Click icon to exit the current interface.
After the completion of settings, please remember to click "Apply" to save the setting.

Fig 4-39 Track Setting

4.9 Advanced

Advanced configuration includes three submenus: reset, import/export and Block/Allow list.

4.9.1 Reset

Reset all settings the device will reboot.

4.9.2 Import/Export

User can export the data files into mobile storage devices as backup function, and then import specified data files from mobile storage device to DVR.

4.9.3 Block/Allow List

Fig 4-40 Block/Allow List

Here authorized user can prohibit computer users within a certain IP address range from accessing to DVR or allow computer users within a certain IP address range to access DVR. For example, if an admin user doesn't want computer users within IP address range from 192.168.000.002 to 192.168.000.004 to access the DVR, he can checkmark Block list option, and then input such IP address range. If it is required that computer users within a certain IP address range access DVR, they can checkmark Allow List option and then do the required configuration.

5 Search, Playback & Backup

Search configuration includes four submenus: time search, event search, file management and image.

5.1 Time Search

Step 1: Enter into Menu→Search →Time Search. Refer to Fig 5-1:

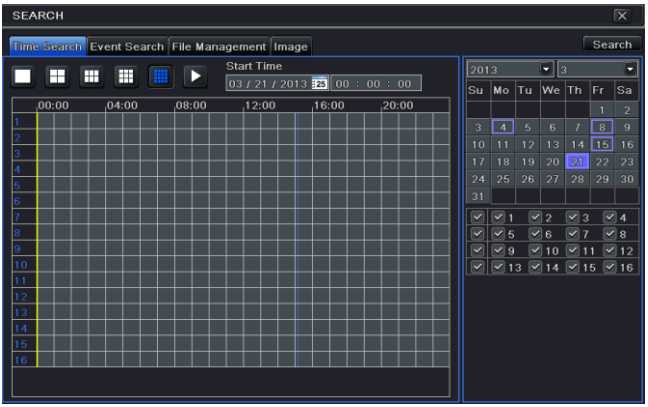

Fig 5-1 Search Configuration-Time Search

Step 2: Select date and channels on the right hand side and press the 'Search' button. A date with highlighted borderline indicates presence of data.
Step 3: Set the start time by clicking a particular grid or by entering the specific value in the start time field.
Step 4: Select the channel display mode and click Play button to play record. Use the playback toolbar to control the playback.

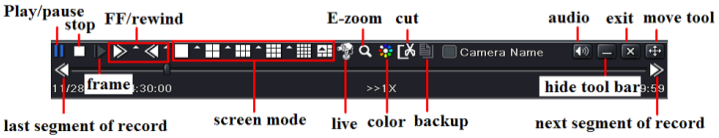

Click button to select channels to show live images in the playback interface. Only four channels at most can be selected to display live images.

- To set backup during a certain period in the playback interface:

Select the start time by dragging the slider and click icon. Then select the end time and click this icon again to confirm the record period. Next, click icon to backup the record during this period.

5.2 Event Search

Step 1: Enter into Menu→Search→Event Search button. Refer to Fig 5-2:

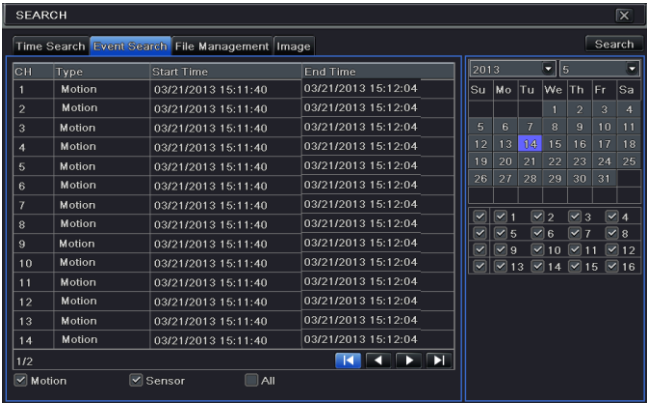

Fig 5-2 Search Configuration-Event Search

Step 2: Select date and channels on the right hand side. A data with highlighted borderline indicates presence of data.

Step 3: Checkmark Motion, Sensor or All accordingly.

Step 4: Click Search button to display the searched event information in the event list box.

Step 5: Double check a certain record file to playback.

5.3 File Management

Step 1: Enter into Menu→Search→File Management interface. Refer to Fig 5-3:

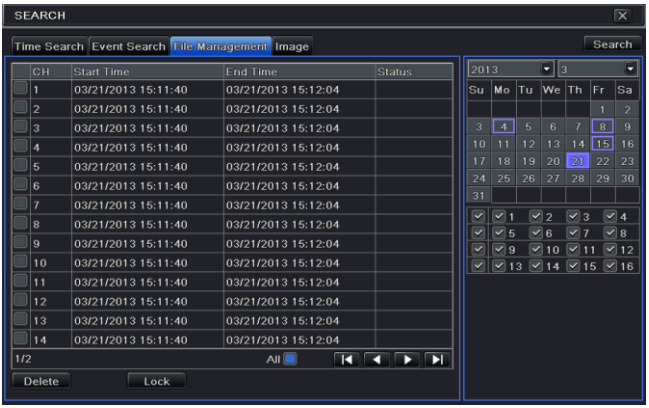

Fig 5-3 Search Configuration-File Management

Step 2: Select date and channels. The date with highlighted borderline indicates presence of

data.
Step 3: Click Search button to display the searched files in the file list box.
Step 4: Use "All" button to lock/unlock or delete all files in the file management column.
Step 5: Double click an unlocked item to play.

Lock: Select a file and click Lock button to lock this file, after that, that file will not be deleted or covered.
Unlock: Select a locked file and click "Lock" button to unlock this file
Delete: Select an unlocked file and click "Delete" button to delete this file.

5.4 Search by Image

Step 1: Enter into Menu → Search → Image tab.
Step 2: Select data and channels on the right hand side.
Step 3: Press "Search" button to search for a recorded image.
Step 4: Once an alarm image has been identified, the user can double click the image to play recording.

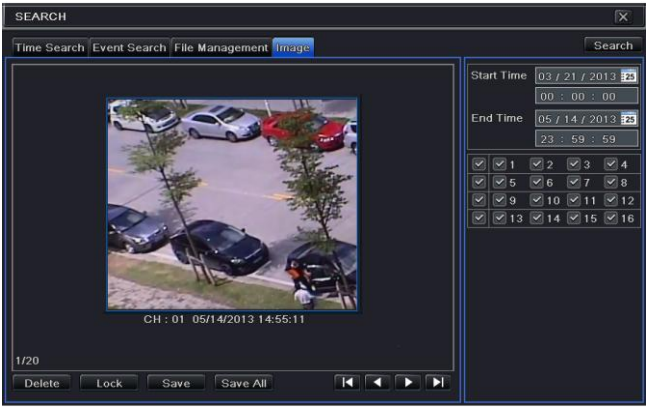

Fig 5-4 Search Configuration-Image

Lock: Select the image and click "Lock" button to lock this image.
Save: Click "Save" button to copy the image on the HDD.
Save All: Click "Save All" button to copy all images on the HDD.

5.5 Backup

This unit supports backup by built-in SATA DVD Writer with USB Flash. You can also make backup by IE browser via internet (see section 7.3.2 Remote backup).
Step 1: Enter into backup configuration. Refer to Fig 5-5:

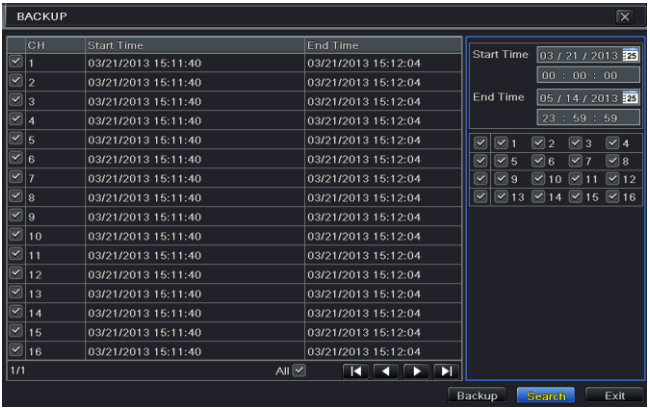

Fig 5-5 Backup Configuration

Step 2: Set the start & end time, select channels and click Search button to display the searched data in the data backup list box.

Step 3: Select a required file or checkmark "All" to select all data files. Click Backup button to display Backup information window.

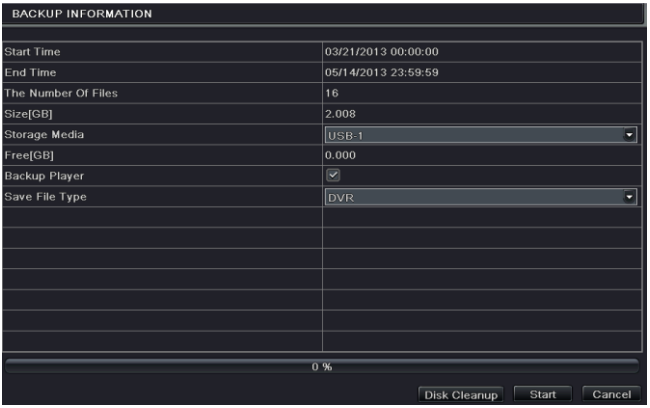

Step 4: In the backup information interface, you can check the relevant information of backup files, storage type, save file type, etc. Then click Start button to start backup.

Note: *If the backup files are saved in DVR format, please check backup player. Only this player can play these files in DVR format. If the backup files are saved in AVI format, you can play these files with common media player.*

6 Manage DVR

6.1 Check System Information

Check system information includes six submenus: system, event, log, network, online user and record.

6.1.1 System Information

In this interface, you can check the hardware version, MCU version, kernel version, device ID, etc.

6.1.2 Event Information

In this interface, you can search for events like motion, sensor and video loss. The utility provides an interface to have a date based and a channel based search. This report can further be saved on a USB flash drive as an html file using the export button.

6.1.3 Log Information

In this interface, you can search for relevant logs as per set date and event which includes Operation, Setup, Playback, Backup, Search, Check Information and Error. This report can further be saved on a USB flash drive as an html file using the export button.

6.1.4 Network Information

In this interface, you can check relevant parameters of network.

6.1.5 Online Information

In this interface, you can check the details of the connected online users.

Refresh: Refresh the current interface.
Disconnect: Disconnect the online users to access DVR. If this function is used by the admin, the particular PC will not be able to access the device for five minutes.

6.1.6 Record Information

In this interface, a user can check resolution, ftp and record status including sensor alarm recording, motion recording, manual recording or schedule recording.

6.2 Manual Alarm

In this interface, you can trigger a manual alarm.

6.3 Disk Management

To format the disk

Step 1: Enter into disk management interface

***Note**: please format the hard disk before record.*

Step 2: Click Refresh button to refresh the disk information in the list box.
Step 3: Select a hard disk and click Format button to start format.

***Note**: All recorded files in the hard disk will be lost after formatting.*

To check other information of disk
After you enter into Disk Management→Advanced tab, you can check model, S/N, firmware, health status of the disk in this interface. You also can monitor the temperature, internal circuit, dielectric material of the disk, analysis the potential problems of the disk and warn so as to protect its data.

6.4 Upgrade

At present, it only supports USB update. Get the software from your vendor when there is a new software version.
The upgrade steps are as follows:
Step 1: Copy the upgrade software which gets from vendor into the USB storage device.
Step 2: Connect the USB flash drive to the USB port.
Step 3: Enter Menu→Upgrade tab. You will see the upgrade software name displaying in the upgrade list box.
Step 4: Select that software and then click Upgrade button. The system will be upgraded automatically.

***Note:** Please wait for a while when the system reboots. Any power interruption is not allowed during upgrading.*

6.5 Logoff

A log off dialogue box will pop up by clicking Log off icon. Then click OK button to confirm to log off. If you want to log in again, click icon to enter user name and password to re-login.

7 Remote Surveillance

7.1 IE Remote Surveillance

In order to view the DVR from a network it must be connected to a LAN/WAN or internet. The network setup should be done accordingly. Please refer to 4.6 Network Setup. This DVR supports IE browser, on Windows XP and Vista platform.

7.1.1 On LAN

Step 1: Enter into the DVR's Main Menu→Setup→Network interface to input IP address, Subnet Mask, etc .If using DHCP, please enable DHCP in both the DVR and the router.
Step 2: Enter Record Setup to set network video parameters like resolution, frame rate etc.
Step 3: Open IE on a computer on the same network. Input the IP address of the DVR in IE address bar and press enter.
Step 4: IE will download ActiveX component automatically. Enter the username and password in the subsequent window

***Notice**: If HTTP port is not 80, other number instead, need add the port number after IP address. For example, set HTTP port as 82, need input IP address like 192.168.0.25:82.*

User name and password here are the same with that used on the DVR. The default username and password is admin and 123456.

7.1.2 On WAN

There are two ways for the DVR to connect to internet.

1. Connect the DVR to internet through router or virtual server

Step 1: Enter into the DVR's Main Menu→Setup→Network interface to input IP address, Subnet Mask, etc. If using DHCP, please enable DHCP in both the DVR and router.
Step 2: Forward IP address and port number in Virtual Server setup of the router or virtual server. Configure the firewall to allow accessing the DVR. (If the user has enabled the UPnP function in both the DVR and router, he can skip this step.)
Step 3: If users want to utilize dynamic domain name, please apply for a domain name in a DNS server supported by the DVR or router. Then add to the DVR or router.

This unit supports www.meibu.com，www.dyndns.com, www.no-ip.com and mintdns type.

Step 4: Open IE browser, input IP address, or dynamic domain name and enter. If HTTP port is not 80, add the port number after IP address or domain name.
Step 5: IE will download ActiveX automatically. Then a window pops up and asks for user name and password. Input name and password correctly, and enter to view.

***Note:** If you cannot download and install ActiveX, please refer to FAQ Q8.*

2. Connect the DVR to internet directly

Step 1: Enter into the DVR's Main Menu→Setup→Network interface to enable PPPoE and then input user name and password received from your ISP. Next, click 'Apply'. The DVR will connect to the server and would give a confirmation message.

Step 2: When accessing the remote interface of DVR, user can input WAN IP to access directly (user can enter into Main menu→Information→Network interface to check IP address). The browser will download Active X control.

Step 3: The following setting steps are as the same as Step 4 and Step 5 in Point 1.

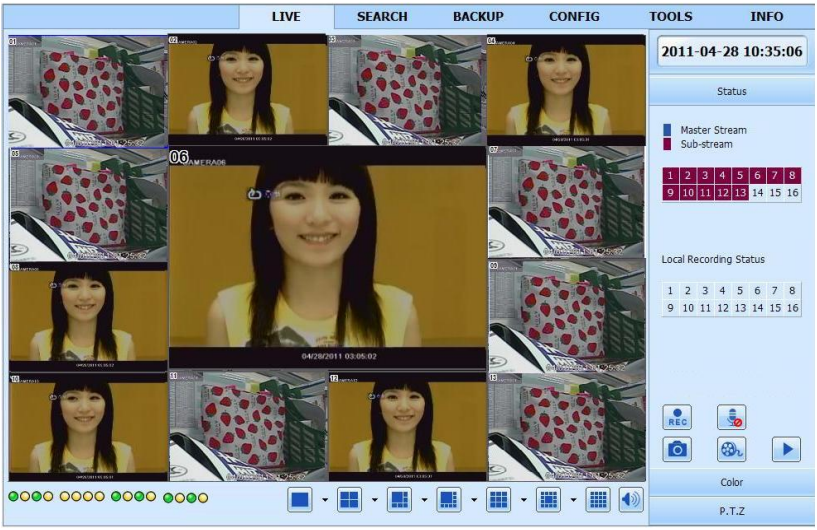

Fig 7-1 View with IE Browser

7.2 Remote Surveillance through Apple PC

Note: *Because the current plug-in version of client end just only supports 32-bit mode, so the safari browser shall start 32-bit mode. If the browser is the earlier MACOS version, the default setting is 32-bit mode and the setting can be skipped.*

The setting steps are as follows:

Step 1: Right click safari icon and select "Show in Finder".

Step 2: Select Applications→Right click "Safari. App"→Select "Get Info".

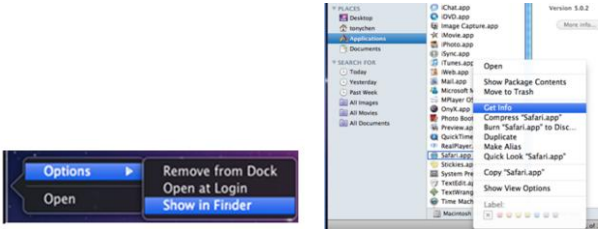

Step 3: Select “Open in 32- bit mode”.

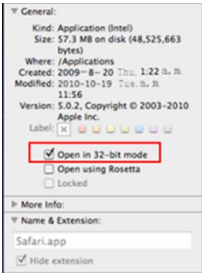

7.2.1 On LAN

Step 1: After starting Apple computer, click Apple icon. The following window will pop up. Please select “System Preferences”→ “Internet &Wireless”→ “Network”.

Step 2: Go into Network interface and then click “Ethernet Connected” to check the internet connection of Apple PC.

Step 3: After acquiring the IP address, Subnet Mask and so on, please enter into the DVR's Main Menu→Setup→Network interface to manually input IP address, Subnet Mask and Gateway according to the configuration of PC. The network segment should be the same as the PC. If using DHCP, please enable DHCP in the DVR and router.

Step 4: After the above information is completed, you can enter LAN IP and http port in the Safari browser. For example: input http://192.168.1.100:81(here 192.168.1.100 is LAN IP of DVR, 81 is the http port of DVR), and click " " button. Then the browser will download Active X control as shown below:

Web Client
http://192.168.1.100:81
Apple
untitled folder
please click icon to load and install WebkitPlugin:
please restart browser to ensure WebkitPlugin can take effect after install!

Step 5: Click icon and then select the Active X control, the welcome interface will be shown. Click "Continue"→ "Install" button，the following window will pop up：

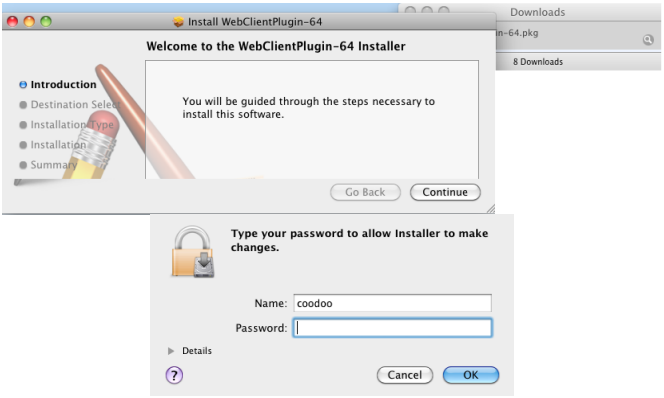

Input the name and password of Apple PC and then click "OK" to install this Active X control.

Step 6: After finishing installing the Active X control, please quit from the Safari browser. Right click Safari icon on the desktop and then select "Quit" button to quit the browser. Then restart Safari browser. Input the IP address and http port to enter into the login interface of DVR.

7.2.2 On WAN

There are also two ways for DVR to connect to Internet.

1. Connect the DVR to internet through router or virtual server

Step 1: The network setups are the same as step one to step four of point 1 on WAN of IE remote surveillance.

Step 2: Enter WAN IP and http port in the Safari browser to install the Active control. The concrete steps are the same as step 5 and 6 of Chapter 7.2.1.

2. Connect the DVR to internet directly.

Step 1: The network setups are the same as step one of point 2 on WAN of IE remote surveillance.

Step 2: Enter WAN IP and http port in the Safari browser to install the Active control. The concrete steps are the same as step 5 and 6 of Chapter 7.2.1.

7.3 The Remote Live Preview

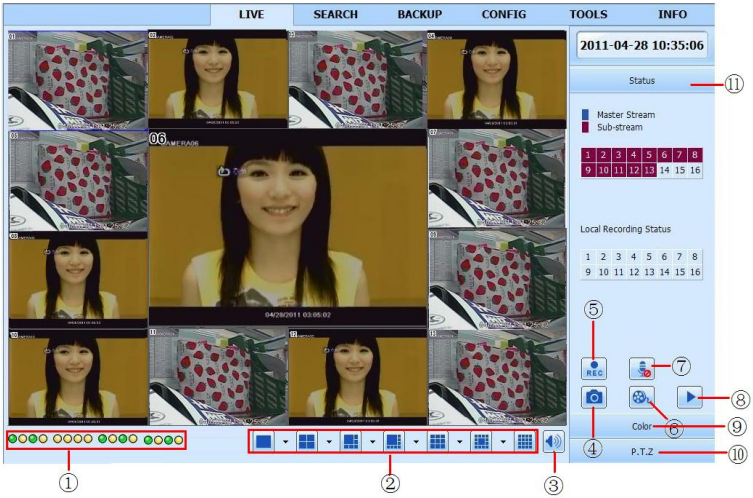

Fig 7-2 Remote Live Preview Interface

Symbol and function definitions:

①	Channel indicator	②	Screen display mode
③	Volume	④	Snapping picture
⑤	Start manual record	⑥	Start IE record
⑦	Bidirectional talk	⑧	Playback
⑨	Color	⑩	PTZ control
⑪	Master/sub stream status		

***Note**: Click* *button to start recording. The record file will be saved in user's PC.*

Screen display mode:

Click the icon beside the screen display mode to select channels.
Take 8-channel DVR for example: you can checkmark channels form 1-ch to 16-ch at random to display the live pictures. A maximum of 16 channels can be selected. Then click OK button to confirm the setting.

Fig 7-3 Channel Select Dialog

Snap pictures

Click "Snap" icon to automatically capture pictures and save those pictures in the computer.
You can set up the save path for those picture in the Remote Preview interface → Configuration →Local configuration.

Color adjustment:

Drag the slide bar to adjust Brightness, Contrast, Hue, and Saturation. Click Default to reset them to original value.

Buttons	Description
	Drag the scroll bar to adjust the brightness of channel
	Drag the scroll bar to adjust the contrast of channel
	Drag the scroll bar to adjust the saturation of channel
	Drag the scroll bar to adjust the hue of channel
	Click this button to recover the default value of brightness, contrast, saturation and hue.
	Save the adjustment

PTZ control

Please connect speed dome to the device via RS485 firstly, make sure the protocol of the speed dome is supported by the device and set the relative parameters manually. User can control the dome up, down, right, left or stop rotating on Control Center, adjust rotation speed, Iris and zoom, focus on the dome, and set the presets, etc.
Buttons definition:

Buttons	Description
	to rotate the dome upwards. to rotate the dome diagonally up-left. to rotate the dome diagonally up-right to rotate the dome downwards. to rotate the dome diagonally down-right to rotate the dome diagonally down-left to rotate the dome towards left. to rotate the dome towards right to stop rotating the dome.
	Drag the scroll bar to adjust rotating speed of the dome.
	'Iris' button. Click button near 'Iris' button to increase light of the dome. Click button near 'Iris' button to decrease light of the dome.
	'Zoom' button. Click button near 'Zoom' button to zoom in the locale picture of this camera. Click button near 'Zoom' button to zoom out the locale picture of this camera.
	'Focus' button. Click button near 'Focus' button to have long focus. Click button near 'Focus' button to have short focus.
	Go to the Preset
	Select and do auto cruise
	Track
	Auto scan
	Wiper button
	Light button

Click the right mouse on the live interface. This will take you to a pull-down menu.

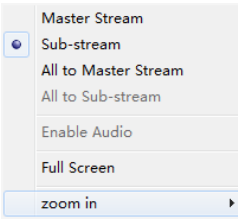

Fig 7-4 Right Key Sub Menu

Stream: This DVR supports master stream and sub stream. Master stream has higher frame rate, max 25FPS（PAL）/30 FPS（NTSC）for every channel, but it needs higher network bandwidth simultaneously. Sub stream has low frame rate, max 6FPS （PAL）/7FPS（NTSC）for every channel, it requires low network bandwidth. Therefore, you can select the stream according to your bandwidth.

All to master/sub stream: Set all channel to master stream or sub stream.
Enable audio: Enable or disenable audio
Full screen: In full screen status, the live preview picture will display with full screen and the tool bar will be hid. Double click left mouse or click right mouse to return.
Zoom in: Single channel large screen electronic amplification. Click the channel which needs to be zoomed. Right click to select zoom in button to zoom in the image. Double click or right click to exit.

7.4 Remote Playback & Backup

7.4.1 Remote Playback

Click button to go into record playback interface. Refer to Fig 7-5:
Select the record date and channels and double-click the file name in the record file list box. Then you can play that file and preview the picture.

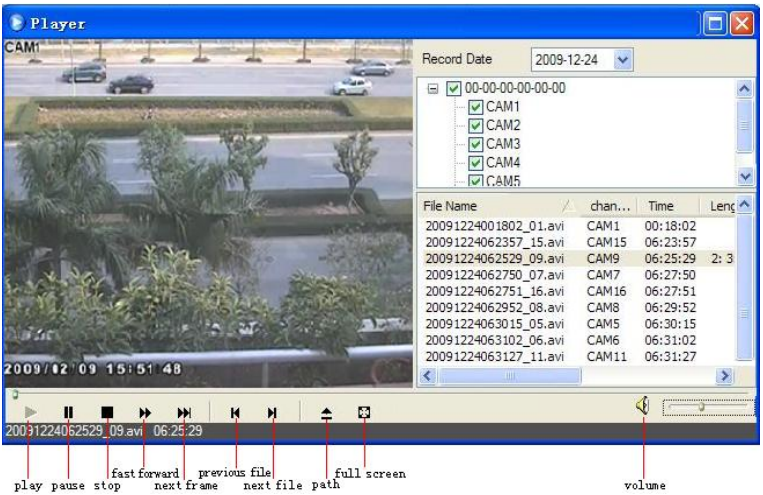

Fig 7-5 Play Record File Interface

This DVR supports remote time search, event search and file management.

By Time Search:
Step 1: Enter into Search→Time Search. Refer to Fig 7-6:

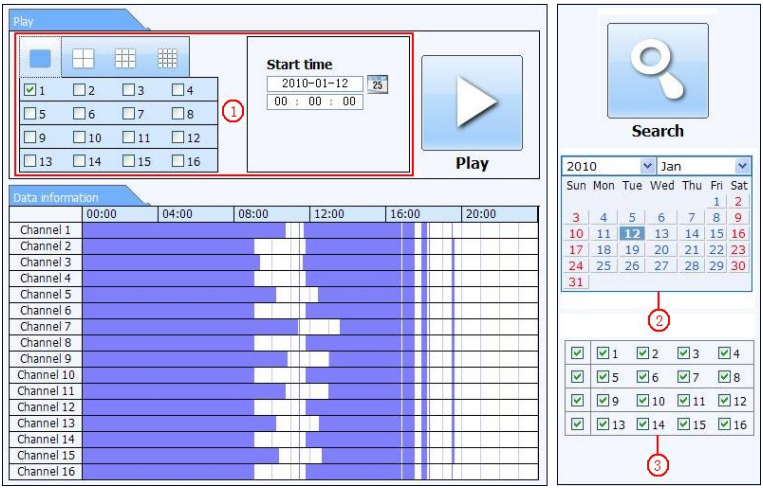

Fig 7-6 Time Search Interface

Step 2: The highlight date in the area② indicates recorded data. Select the date in area ② and record channels in area③.

Step 3: Click "Search" button. The record data will be displayed in the data information list box.

Step 4: Set the data playing time and display mode in the area① as required.

Step 5: Click "Play" button to playback.

Step 6: Click the relevant buttons in the interface for operation, like FF, pause, change channel mode, etc. Refer to Fig 7-7:

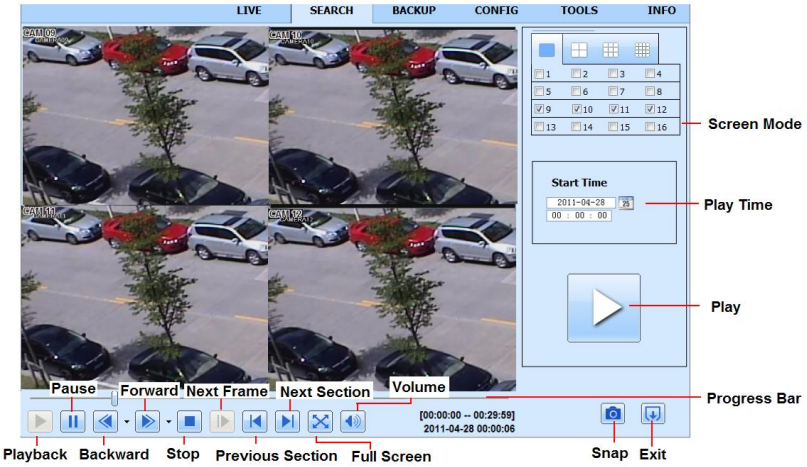

Fig 7-7 Time Search Playback

By Event Search:

Step 1: Enter into Search→Event Search interface. Refer to Fig 7-8:

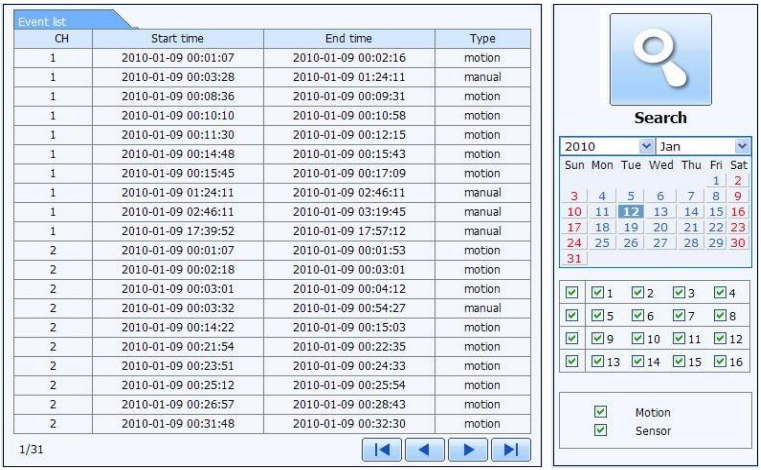

Fig 7-8 Event Search Interface

Step 2: Click the highlight date and select record channels.

Step 3: Checkmark the event type: motion and sensor.

Step 4: Click "Search" button.

Step 5: Double-click certain item to play.

File Management

Step 1: Enter into Search→File Management interface. Refer to Fig 7-9:

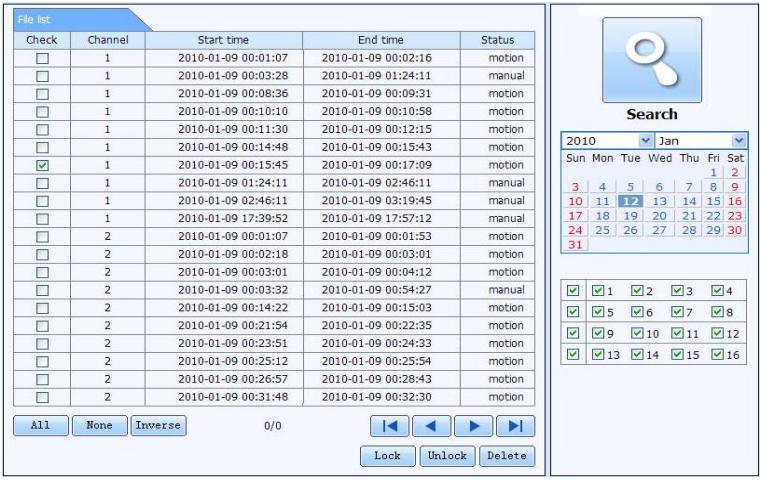

Fig 7-9 File Management Interface

Step 2: Select highlighted date and channels.
Step 3: Click "Search" button to search the recorded files.

Lock: Select certain file item in the file list box and then click "Lock" button to lock this file that ca not be deleted or overlaid.
Unlock: Select a locked file and then click "Unlock" button to unlock this file.
Delete: Select an unlock file and then click "Delete" button to delete this file from file list.

7.4.2 Remote Backup

Click Backup button to enter into backup interface. Please refer to Fig 7-10:

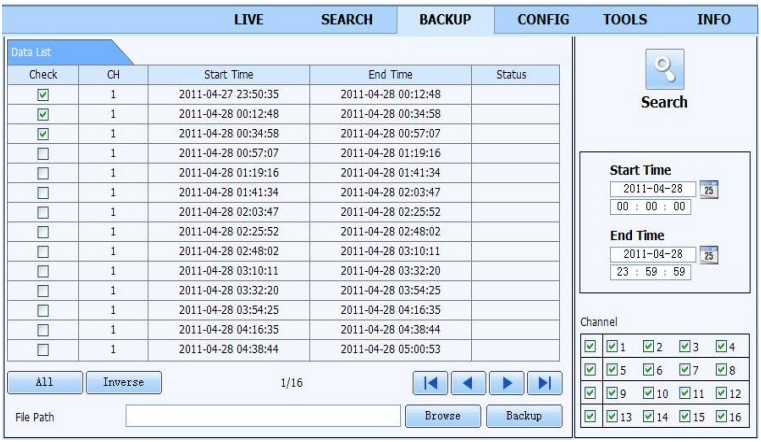

Fig 7-10 Remote Backup Interface

Step 1: Select channels, set the start and end time and then click "search' button to display the file information in the file list box.
Step 2: Select backup files and click "Browse" button to set the save path. Then click "Backup" button to start backup. The backup files will be saved on user's PC.

7.5 Remote System Configuration

You can do remote setup of the device which includes functions like basic configuration, live configuration, record configuration, schedule configuration, alarm configuration, network configuration, PTZ configuration and user configuration. You should select an option from the menu list on the left and then setup the relative parameters. Only one user can do configuration setup at a given point of time. Click Config tab to enter into the below interface

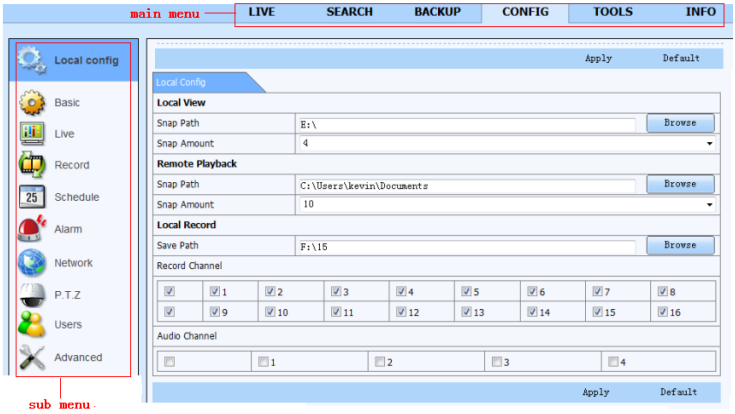

Fig 7-11 Remote Menu Setup

The sub menu list and the options in every menu are similar to that of the DVR. Please refer to Chapter 4 Main Menu Setup Guide for more details.

7.6 Tools

Click on the tool's tab to access the Disk Management tool. The user can view the status of the hard drive(s), can view/change the read write properties and can also format the hard drive(s).

7.7 Remote Management

The Info interface provides a web based interface to access the general information pertaining to the DVR's settings. The interface includes five submenus: System, Event, Log, Network and Online users.

> ***Note:*** *There may be subtle differences with respect to functions of remote surveillance between through IE and through Apple PC. Here we only take IE remote access for example.*

8 Mobile Surveillance

This DVR supports mobile surveillance by iPhone, Gphone，Blackberry or smart phones with Windows mobile OS. At the same time, it supports 3G network. We tested Dopod D600 (WM5) and Dopod S1 (WM6), which work fine with the DVR.

If you want to make mobile surveillance, please enable network service on the DVR first and refer to Chapter 4.6 Network configuration. The below is the use instructions on mobile client end for four OS.

8.1 By Phones with Windows Mobile OS

Step 1：Activate the network access on mobile phone.

Step 2: Run “Internet Explorer” and input the server’s address. The connection is built up shown as below picture on the left.

Step 3：Click on the software name. A dialog box pops up as below picture in the middle.

Step 4：Click “Yes” to start downloading and installing.

Step 5：PCam will be opened automatically after installation. Refer to the picture on the right.

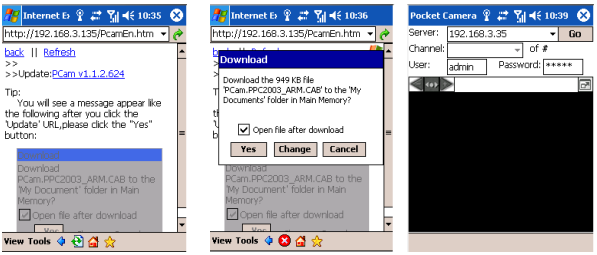

Step 6：Input the server’s address, ID and password respectively in the columns of “Server”, “User” and “Password”, and click “Go” to log on the server. Refer to the below picture on the left:

Step 7：Camera 1 is the default channel after login. Change the channel in rolling-down menu of “Channel”. Refer to the below picture on the right.

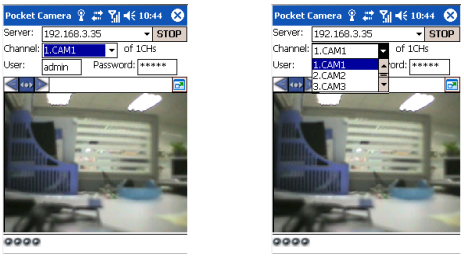

Notice: *User name and password here are the same with that used on the DVR. The default is admin and 123456.*

8.2 By Phones with iPhone OS

➢ Install through iPhone

Step 1: Open App Store function of iPhone.

Step 2: Enable "Search" function to search "Superlive".

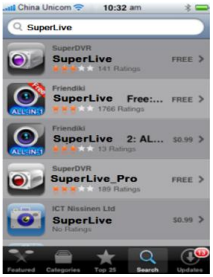

Step 3: Click Superlive-pro, enter into "Introduce" interface and then click "FREE". The "FREE" button will change into "INSTALL" button.

China Unicom
2:19 p.m.
Search
Info
SuperLive _Pro
No Ratings
FREE
SuperLive is a professional mobile phone client software for digital video recorders and IP cameras in CCTV surveillance (compatible models only).
1.Support single,Multi-channel monitor switching.
2.Support PTZ control
3.Support channel video capture,record and record playback
4.Support channel audio
5.Support server list. No limit on the number of server list.
6.Support audio , shake alarm.
7.Support remoto server information query.
8.Support electronic zoom (fullscreen mode)
9.Support backup record files to Ablum on iPhone,then you can transport these files to PC by iTunes.
Featured
Categories
Top 25
Search
Updates

China Unicom
2:19 p.m.
Search
Info
SuperLive _Pro
No Ratings
INSTALL
SuperLive is a professional mobile phone client software for digital video recorders and IP cameras in CCTV surveillance (compatible models only).
1.Support single,Multi-channel monitor switching.
2.Support PTZ control
3.Support channel video capture,record and record playback
4.Support channel audio
5.Support server list. No limit on the number of server list.
6.Support audio , shake alarm.
7.Support remoto server information query.
8.Support electronic zoom (fullscreen mode)
9.Support backup record files to Ablum on iPhone,then you can transport these files to PC by iTunes.
Featured
Categories
Top 25
Search
Updates

Step 4: Input iTunes Store password and then click "OK".

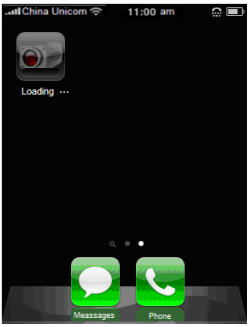

***Note**: If it is the first time for user to operate, please enter user ID; if there is no Store account, user needs to apply for one.*

➢ Install through PC

Step 1: Install iTunes store in PC and then login.

Step 2: Connect iPhone and PC.

Step 3: Enable “search” function to search “Superlive”.

Step 4: Click “Free Application” button.

Step 5: Input apple ID and password, then click “Acquire”.

Step 6: Checkmark “synchronously apply program” and “Superlive-pro”, and then click “apply” button

➢ Operation Instruction for Superlive-pro (iPhone)

Login interface

Enter server's IP address (or domain name), user name and password

Click "Remember server" to save the setting; click ▼ button can quick input saved server address, user name and password.

Main Interface

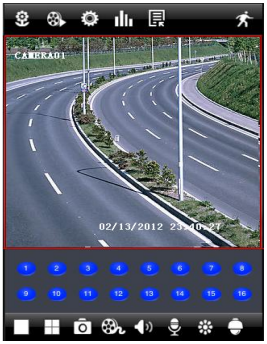

	Image view		Four channel
	Playback		Snap
	Setting		Record
	Information view		Audio
	Server list		Talk
	Logoff		Color
	Single channel		PTZ

	Upward rotates the PTZ		Downward rotates the PTZ
	Leftward rotates the PTZ		Rightward rotates the PTZ
	Stop rotating the PTZ		Zoom In/Focus In/Iris Add
	Zoom Out/Focus Out/Iris Sub		To enter into the next interface
	To return to the previous interface	Preset	select the preset point
Cruise	Set the cruise line	Speed	Rotate speed of the PTZ

Image View

After the image is snapped, you can click icon to enter into the image view interface. Select the image and click it to amplify this image. Then you can copy or delete the image. Click ‘close’ button to return to the previous interface.

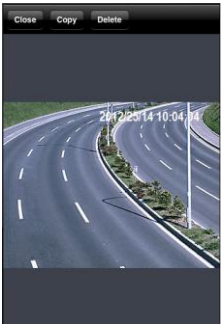

Playback

Click icon to enter into the playback interface. Then click ‘Search’ button, select the time and channel to playback and click button. Now you can see the local file list. Select a file and click play button to playback. You can also copy or delete the file. Finally, click

'Close' button to return to the previous interface.

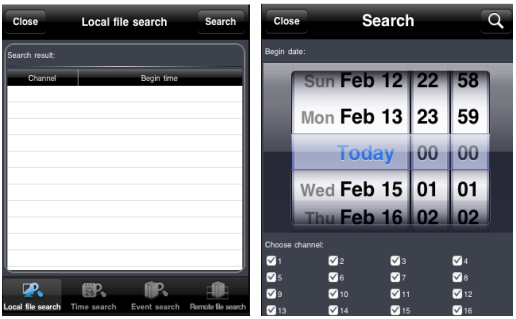

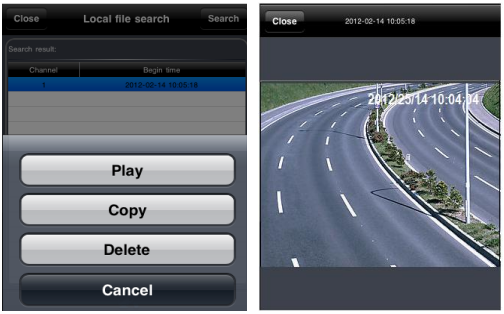

You can also search file to playback through time search, event search and remote file search. Please click the related button.

Server list

Click button to enter into server list interface. You can click icon to add a server list. After you add the list, you can click icon to edit the server information and click icon to delete this server information

Configuration interface

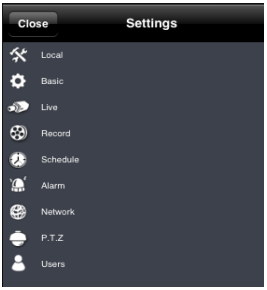

Click icon to enter into Settings interface. You can set many properties, such as local, basic, live, record, schedule, alarm, network, etc. Please see chapter four in respect of setting steps for more details.

Information View Interface

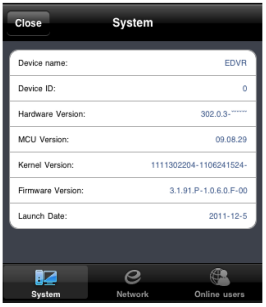

Click icon to enter into information view interface. You can check the information of system, network and online users. In the system interface, you can see the information of device name, device ID, hardware version, MCU version and so on. In the network interface, you can see the information of http port, server port, IP address, gateway, network status, etc. In the online users interface, you can see the information of the current online users.

8.3 By Phones with Android OS

➢ Software Installation

Step 1: Run Google Market program. **Step 2**: Search "Supercam".

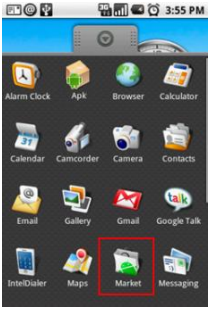

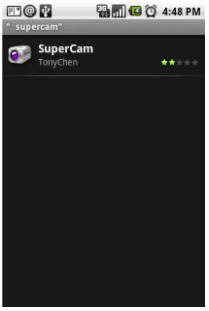

Step 3: Press "Install" button. **Step 4**: Click "OK" button.

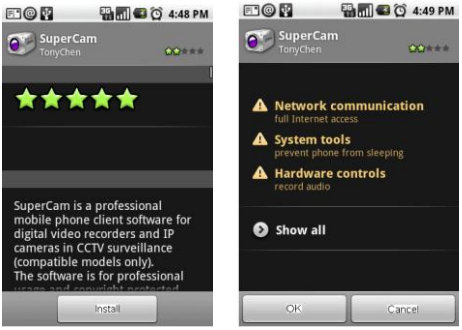

Step 5: You can view the download and install process in notifications. Once the download is done, the software will install automatically.

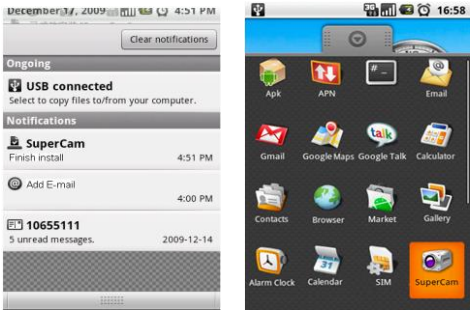

Login

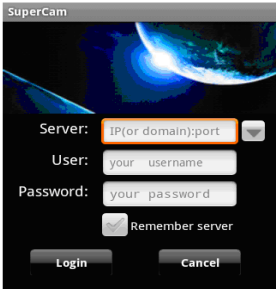

Enter into server's IP address (or domain name), user's ID and password.
Click "Remember server" to save the setting; click ▼ button can quick input saved server address, user name and password.

Main menu

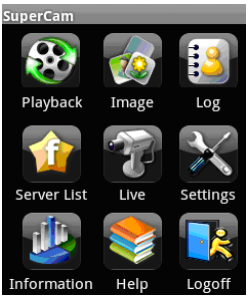

Playback	playback record file
Image	image view
Log	log record
Server List	device list
Live	live view
Settings	software setting
Information	device information view
Help	software help center
Logoff	logoff and return to login interface

Live view

	Stop playing		Single channel display
	Screen mode		Four channels display
	Snap		PTZ
	Talk		Record
	Live audio		Hide

Image view

	The first picture		Zoom in
	The previous picture		Zoom out
	Next picture		Delete
	The last picture		

Record playback

	Play/Pause
	Stop
	Fast forward
	Slow play

Click Playback icon in the Main Menu interface to enter into the playback interface. First, choose channel. Second, select the record file and click it to playback. Finally, click 'Return' button to return to the previous interface.

Server list

Add	Add a server list
Modify	Modify a server list
Delete	Delete a server list
Return	Return to the previous interface

Config interface

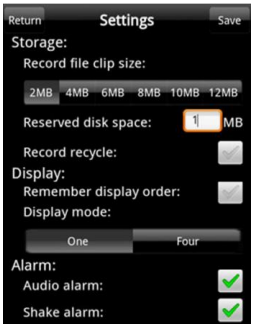

Alarm setting	If Audio alarm is enabled, when Video Loss/Sensor/Motion happen , sound alarm will be triggered; If shake Alarm is enabled, when Video Loss/Sensor/Motion happen , shake alarm will be triggered.
Storage setting	User can setup the relevant parameters of mobile video. This function can be valid only insert SD card.
Display setting	User can setup display order or display mode.

Information view

8.4 By Phones with Blackberry OS

➢ Installation instruction for BlackBerry Mobile phone Client

Step 1: Open the browser of BlackBerry phone and enter sever address.
Step 2: Click “Supercam” to link.

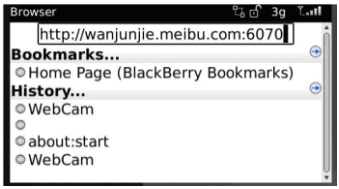

WebCam
WELCOME
SuperCam for BlackBerry
NOTE:
This software is designed for BlackBerry OS above 4.5.
If you use BlackBerry storm 9500 or 9530,You will have a compatible probler
just choose Option menu->Advance options-> Application->SuperCan
SuperDVR components

Step 3: Click "Download" button on the popup interface.

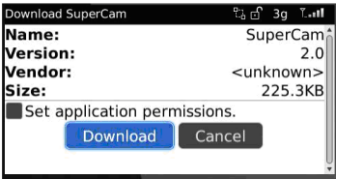

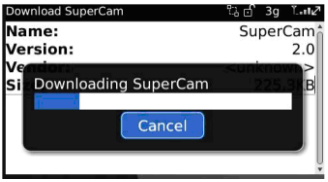

Step 4. After the download is done, the software will be installed automatically.

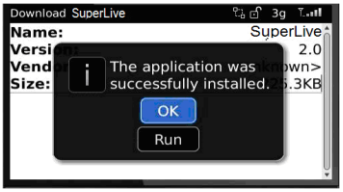

If the software fails to download, please check in accordance with the following steps:

1. Check whether the network of mobile phone is normal or not.
2. Check whether DVR server connect network normally or not.
3. Modify the option of Browser Configuration.

(1) Enter into Menu->Option->Browser Configuration. Refer to the following figure on the left.

(2) Enter into Menu->Option->Cache Operations. Clear up browser cache. Refer to the below picture on the right.

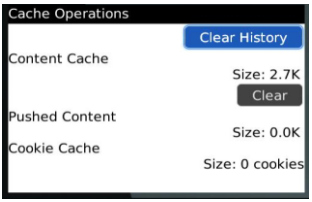

Note: *When user used the Supercam software in mobile phone with touch screen, there will be compatible problem.*

Solution: Enter into Options Menu->Advance options->Applications->Supercam and click "Disable Compatibility" button. This problem will be solved.

➢ Operation method for Blackberry mobile phone client

Login

Step 1: Enter server's IP address (or domain name), user name and password.

Step 2: Click "Login" button.

Click "Remember server" to save the setting; click ▼ button can quick input saved server address, user name and password.

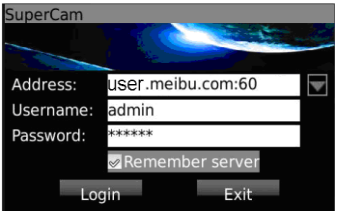

Main interface

Image	Image view
Log	Log record
Server List	Device list
Live	Live view
Settings	Software setting
Information	Device information view
Help	Software help center
Logoff	Logoff and return to login interface

Live view

Note: *User can click* *Return button on the Blackberry phone to return the previous interface.*

Mark 1	Current viewing channel	Mark 2	Channel status
	Switch channels		PTZ, click to switch to Fig 2 interface
	Snap		Full screen
	Background alarm		Stop rotating the PTZ
	Upward rotates the PTZ		Downward rotates the PTZ
	Leftward rotates the PTZ		Rightward rotates the PTZ
	Zoom In/Focus In/Iris Add		Zoom Out/Focus Out/Iris Sub
Preset	Select the preset point	Group	Set the cruise line

Server list

[Add] Add a server list

[Modify] Modify a server list

[Delete] Delete a server list

Software configuration

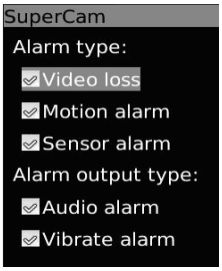

Alarm type: Setup the type of background alarm

(Video Loss/Sensor/Motion)

Alarm output type: Setup prompt type of backgound

Alarm (sound alarm/ bibrate alarm)

Information view

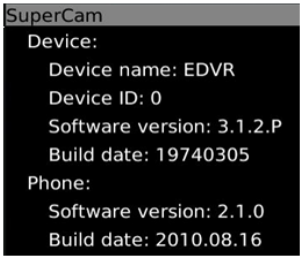

Device ID: the current connection device ID

Software version: the current connection device software version

Build date: the current connection device build date

Software version: the software version of mobile phone in use

Software build date: the software build date of mobile phone in use

Appendix A FAQ

Q1. Why the DVR doesn't turn on after connecting to the power?

a. The power adapter could have gone bad. Please change a new power adapter.
b. The power from the adapter may be not enough for operating the DVR. Please use the power adaptor supplied along with the DVR.
c. It could be a hardware problem.

Q2. There is not menu displayed and only has live image display.

a. Check whether the monitor is connected to the main video out and not the spot out. The monitor might be connected to VGA port whereas the DVR may be set for output through BNC or vice versa. Long press ESC key to toggle the output modes.

Q3. The DVR LED turns on, however there is no output.

a. The power from the adapter may be not enough for operating the DVR. Please use the power adaptor supplied along with the DVR.
b. It could be a wiring issue. Please check the connection for the same.
c. Check the monitor settings.

Q4. Why are no images displayed on few or all channels of the DVR?

a. It could be a wiring issue. Please check the cable and the ports of the cameras and DVR.
b. The problem can also be related to cameras. Please check the same.
c. Please make sure that the channels are not programmed as hidden channels and check the status from admin login.

Q5. The HDD cannot be found.

a. The power from the adapter may be not enough for operating the DVR. Please use the power adaptor supplied along with the DVR.
b. It could be wiring issue. Please check the power and data cables of the HDD.
c. The HDD could have gone bad. Change a new one.

Q6. The DVR cannot record.

a. Make sure the HDD was formatted prior to use.
b. Maybe the user hasn't enabled the record function or has done incorrect setup. Please refer to Chapter 5.
c. Maybe HDD is full and thus the DVR is not able to record. Check HDD information from Disk Management and if required, please enable the recycle function.
d. The HDD could have gone bad. Please change another one.

Q7. Mouse doesn't work.

a. The mouse should be connected to the USB port at the rear side.

b. After connecting the mouse, allow the DVR to detect the mouse for seconds. If not detected, try restarting the DVR.
c. The mouse may be incompatible. Please change a mouse.

Q8. ActiveX control cannot be downloaded.

a. IE browser blocks ActiveX. Please do setup as per the steps mentioned below.
Step1: Open IE browser. Click Tools→Internet Options.

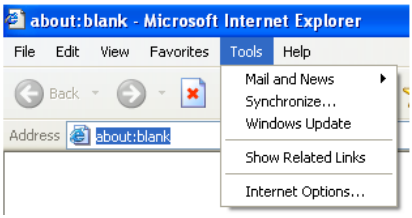

Step 2: Select Security→Custom Level. Refer to Fig 8-1
Step 3: Enable all the sub options under "ActiveX controls and plug-ins". Refer to Fig 8-2
Then click Ok to finish setup.

b. Other plug-ins or anti-virus blocks ActiveX. Please uninstall or do the required settings.

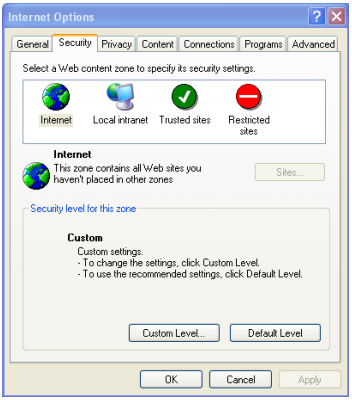

Fig 8-1

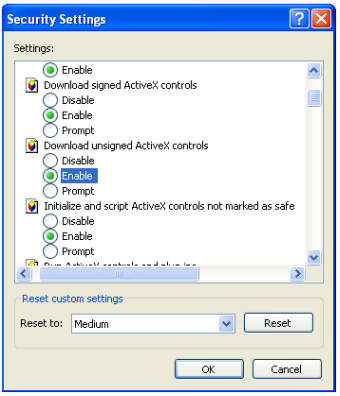

Fig 8-2

Q9: DVR displays "please wait…"all the time.

a. HDD power cable and data cable may not be well connected. Please check the connections for HDD.
b. It is also possible that the DVR was forced to stop because HDD has a bad sector and it may have caused the system to halt. Check with a good known HDD or try formatting the existing HDD.

Q10: How to input password and digital numbers?

Click the password or the input box a small keyboard will pop up. Please select characters to be input (the initial password is 123456), or you can use the digital keys on the front panel, or the digital keys on the remote controller.

Q11: A hard disk is being identified as a new device however it was being used with another DVR of same model. Should it be formatted prior use?

It is possible to migrate an HDD from one DVR to another provided that the DVRs are of the same model and that the HDD being migrated would be used as the sole disk in the new DVR. However in cases where the new DVR already contains a HDD, the migrated disk being installed would have to be formatted. In general migrating disks from one DVR to another is not recommended.

Q12: What is the minimum configuration required for remote monitoring?

PC Module	Parameters
CPU	Intel Celeron 2.4G
Motherboard	Intel 845
HDD	80G
RAM	512M
VGA	NVIDIA GeForce MX440/FX5200 ATIRADEON 7500/X300
OS	Windows 2000(SP4 above) /Windows XP(SP2 above) /VISTA
DirectX	9.0

Q13: What is the PC configuration for 16-ch real time viewing of mainstream?

PC Module	Parameters
CPU	Intel Core(TM)2 Duo CPU E4600
Motherboard	G31/P31 chip
HDD	80G
RAM	1GB
VGA	GMA3100/NVIDIA GeForce 8400/ATI RADEON HD3450
OS	Windows 2000(SP4 above) /Windows XP(SP2 above) VISTA
DirectX	9.0

Q14: How to handle the situation that the codec Control is blocked when downloading in the VISTA or Win7 system?

This problem can be fixed in two ways:

a. Enter Control Panel→User Account and Family Safety → User Account Control (refer to Fig 14-1) and click Turn User Account on or off. Cancel Use User Account Control

(UAC) to help protect your computer.

Turn User Acco...
Search
Turn on User Account Control (UAC) to make your computer more secure
User Account Control (UAC) can help prevent unauthorized changes to your computer. We recommend that you leave UAC turned on to help protect your computer.
Use User Account Control (UAC) to help protect your computer
OK
Cancel

b. Right click IE browser (refer to Fig 14-2) and select Run as administrator to run browser.

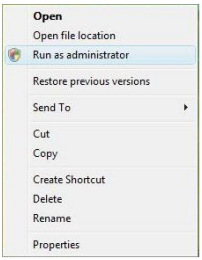

Q15. How to play the backup file?

Insert your USB device where the backup files are saved in the USB port of PC. If your files are saved in DVR format, you must have already downloaded the backup player box before doing backup. Then double click to open your USB disk to find your backup files and backup player. Double click

icon to install backup player. After you install it, open this player and click “Open Path” button to open your backup file. Next, click play button to play the backup file. Double click the image and then right click to enable audio. If you save your backup files in AVI format, you can directly open your file by using the media player which supports this format.

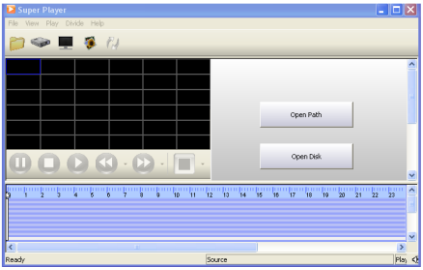

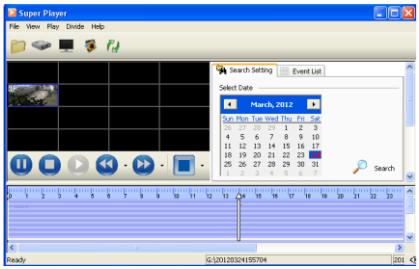

Appendix B Calculate Recording Capacity

Users can calculate the size of hard disk according to the saving time and DVR recording settings. The DVR uses fixed video bit rate. The below are the details at different settings.

Resolution	Frame Rate Totally(FPS)	Video Quality	Bit Rate (kbps)	Used Space (MB/h)
WD1	30	Highest	2.5M	1125
		Higher	2M	900
		Medium	1.75M	788
		Low	1.5M	675
		Lower	1M	450
		Lowest	768	338
D1	25	Highest	2M	915
		Higher	1.5M	712
		Medium	1M	468
		Low	768K	297
		Lower	512K	241
		Lowest	256K	112

The calculation format is: **Total Recording capacity =Used space per hour (MB/h) (coverage rate of hard disk) × recording time (hour) ×channel numbers**

For instance, one customer uses PAL cameras, set resolution to WD1, video quality to Lowest, frame rate to 25 fps for enabling total 4 channels. He wants the unit to record continuously in a month. Below is the calculation:

Total Recoding capacity =338 (mb/h) X 24(hours/day) X30(days) X4(channels)= 973440 (MB) ≈950 (GB)

Therefore, customers just install one SATA HDDs with 1TB, it can almost record for one month.

Appendix C Compatible Devices

1. Compatible USB drive after test.

Brand	Capacity
SSK	512MB, 1G, 2GB
Netac	4GB
Kingston	2GB
Aigo	2GB
Smatter vider	1GB
SanDisk	4GB

2. Compatible SATA CD/DVD writers after test

Brand	Model
TECLAST	GH22NP20/TL-22XD
BENQ	DW220S-0K4
LITEON	DH—20A6S01C
LITEON	DH-20A4P02C
SAMSUNG	TS-H653B

3. Compatible HDD list

Brand	Capacity
Seagate Barracuda	80G/160G/250G/320G /1.5T/2TB
Seagate SV35.3	1T
Seagate Pipeline HD.2	500G
Maxtor Diamondmax	160G
HITACHI Deskstar	80G/160G
WD WD1600JS	160G
Samsung HD161HJ	160G

Appendix D 4-CH Specifications

Compression format	H.264 Main Profile
Video output	Composite：1.0V p-p/75Ω BNC×2, VGA×1, HDMI×1
Video Input	Composite：1.0V p-p/75Ω BNC×4
HDMI/VGA Resolution	1920*1080/1280*1024 /1024*768/ 800*600
Record Resolution	960*576/704*576/352*288 (PAL), 960*480/704*480/352*240(NTSC)
Display Frame Rate	100FPS (PAL), 120FPS (NTSC)
Record Frame Rate	100FPS (PAL), 100FPS (NTSC)
Audio Input	RCA X4
Audio output	RCA X1
Alarm Input	NO or NC 4CH
Alarm output:	1CH
Record Mode	Manual / Sensor /Timer / Motion detection
Simplex/Duplex/Triplex	Pentaplex
Network Interface	RJ45 (LAN, INTERNET)
PTZ control	YES
Communication interface	RS485, USB2.0 x 2 (one for backup, another for USB mouse)
Disk info	SATA x 1+DVD-RW x 1 or SATA x 2
Remote controller	YES
Power Supply	DC12V
Temperature	0℃-50℃
Humidity	10%-90%
Average Operating Power （Excluding HDD）	≤40W

Appendix E 8-CH Specifications

Compression format	H.264 Main Profile
Video output	Composite：1.0V p-p/75Ω BNC×2, VGA×1, HDMI×1
Video Input	Composite：1.0V p-p/75Ω BNC×8
HDMI/VGA Resolution	1920*1080/1280*1024 /1024*768/ 800*600
Record Resolution	960*576/704*576/352*288 (PAL), 960*480/704*480/352*240(NTSC)
Display Frame Rate	200FPS (PAL), 240FPS (NTSC)
Record Frame Rate	200FPS (PAL), 240FPS (NTSC)
Audio Input	RCA X4
Audio output	RCA X1
Alarm Input	NO or NC 8CH
Alarm output:	1CH
Record Mode	Manual / Sensor /Timer / Motion detection
Simplex/Duplex/Triplex	Pentaplex
Network Interface	RJ45 (LAN, INTERNET)
PTZ control	YES
Communication interface	RS485, USB2.0 x 2 (one for backup, another for USB mouse)
Disk info	SATA x 1+DVD-RW x 1 or SATA x 2
Remote controller	YES
Power Supply	DC12V
Temperature	0℃-50℃
Humidity	10%-90%
Average Operating Power （Excluding HDD）	≤40W

Appendix F 16-CH Specifications

Compression format	H.264 Main Profile
Video output	Composite：1.0V p-p/75Ω BNC×2, VGA×1, HDMI×1
Video input	Composite：1.0V p-p/75Ω BNC×16
HDMI/VGA Resolution	1920*1080/1280*1024 /1024*768/ 800*600
Record Resolution	960*576/704*576/352*288 (PAL), 960*480/704*480/352*240(NTSC)
Display Frame Rate	400FPS (PAL), 480FPS (NTSC)
Record Frame Rate	400FPS (PAL), 480FPS (NTSC)
Audio input	RCA X4
Audio output	RCA X1
Alarm input	NO or NC 16CH
Alarm output:	1CH
Record Mode	Manual / Sensor /Timer / Motion detection
Simplex/Duplex/Triplex	Pentaplex
Network Interface	RJ45 (LAN, INTERNET)
PTZ control	YES
Communication interface	RS485, USB2.0 x 2 (one for backup, another for USB mouse)
Disk info	SATA x 1+DVD-RW x 1 or SATA x 2
Remote controller	YES
Power supply	DC12V
Temperature	0℃-50℃
Humidity	10%-90%
Average Operating Power （Excluding HDD）	≤40W

450011000326 A2